



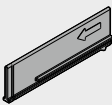










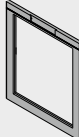
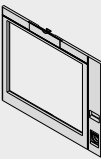
SACE Tmax XT

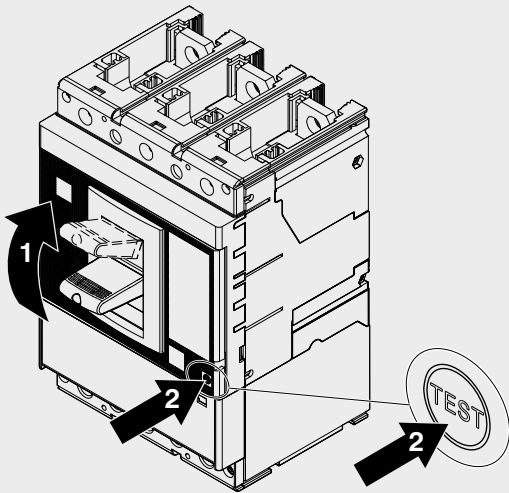

Istruzioni di installazione XT5 IEC
Installation instructions XT5 IEC
Installationsanleitung XT5 IEC
Instructions pour l'installation XT5 IEC
Instrucciones de instalación XT5 IEC
安装说明书 XT5 IEC

XT5 3p-4p



		A	B	C	D	E	F	G	H	I	L	M	N	O	P																						
		 5,3mm H - Shape <table border="1"><tr><td>LENGHT</td><td>M</td><td>M5</td></tr><tr><td></td><td>105mm</td><td></td></tr></table>	LENGHT	M	M5		105mm			 CH 8 <table border="1"><tr><td>LENGHT</td><td>M</td><td>M10</td></tr><tr><td></td><td>25mm</td><td></td></tr></table>	LENGHT	M	M10		25mm		 <table border="1"><tr><td>Ø 10,5x18</td></tr></table>	Ø 10,5x18				 <table border="1"><tr><td>LENGHT</td><td>M</td><td>M5</td></tr><tr><td></td><td>18mm</td><td></td></tr></table>	LENGHT	M	M5		18mm		 <table border="1"><tr><td>CH 8</td></tr></table>	CH 8	 <table border="1"><tr><td>M</td><td>M5</td></tr></table>	M	M5				
LENGHT	M	M5																																			
	105mm																																				
LENGHT	M	M10																																			
	25mm																																				
Ø 10,5x18																																					
LENGHT	M	M5																																			
	18mm																																				
CH 8																																					
M	M5																																				
F	3p	x4	x4	x6	x6	x1	x1	x1	-	x4	x4	x6	x6	x1	-																						
	4p	x4	x6	x8	x8	x1	x1	x1	-	x4	x4	x8	x8	x1	-																						
P	3p	x4	-	-	-	x1	x1	x1	x4	x8	x4	-	-	x1	-																						
	4p	x4	-	-	-	x1	x1	x1	x4	x8	x4	-	-	x1	-																						
W	3p	-	-	-	-	-	-	-	x4	x8	x4	-	-	-	x1																						
	4p	-	-	-	-	-	-	-	x4	x8	x4	-	-	-	x1																						

- Usare cavi/barre isolate o capocorda isolati o eseguire prove di tipo specifiche sull'installazione.
- Use insulated cables/bars or insulated cable terminals or perform specific type tests on the installation.
- Isolierte Kabel/Sammelschienen oder isolierte Kabelschuhe verwenden oder spezifische Typprüfungen an der Anlage ausführen.
- Utiliser câbles/barres isolées ou des cosses isolées ou réaliser un test de type spécifique sur l'installation.
- Usar cables/barras aislados o terminales aislados o bien ejecutar pruebas de tipo específicas en la instalación.
- 在安装时使用绝缘电缆/绝缘杆，或绝缘接线片，或执行特定的测试。

Terminal type				F	EF ⁽³⁾	ES	R	FC CuAl 1x35...185mm ² 1x120...240mm ²	FC CuAl 2x70...240mm ²
Ue <500 V	Supply side	BOTTOM/TOP	Back shield	-	S _T ⁽²⁾	S _T ⁽²⁾	S _T	-	S _T
			Phase barrier	-	S _T - 100 mm	S _T - 200 mm	-	-	S _T - 100 mm
			Terminal cover	-	-	-	S _T	-	-
Ue ≥500 V	Supply side	TOP	Back shield	-	S _T	S _T	S _T	-	S _T
			Phase barrier	S _{CB} - 25 mm	S _T - 100 mm	S _T - 200 mm	-	S _{CB} - 25 mm	S _T - 100 mm
			Terminal cover	-	-	-	S _T	-	-
		BOTTOM	Back shield	Required ⁽¹⁾	S _T ⁽⁴⁾	S _T ⁽⁴⁾	S _T	Required ⁽¹⁾	S _T
			Phase barrier	S _{CB} - 25 mm	S _T - 100 mm	S _T - 200 mm	-	S _{CB} - 25 mm	S _T - 100 mm
			Terminal cover	-	-	-	S _T	-	-

(1) If back panel of the enclosure is bare metal, use back shield code 1SDA112971R1(3p), 1SDA112972R1(4p) or alternatively insulate back panel according to figure 3

(2) Mandatory only for XT5 with breaking capacity V, X

(3) At 690V insulate front panel of the enclosures only for XT5 with breaking capacity L, V, X according to figure 3

(4) In case of installation with double cable terminal, provide 100 mm additional insulation from breaker bottom edge downward

S_{CB} - Mandatory installation - Supplied as standard with circuit-breaker, not available in the loose terminals kit

S_T - Mandatory installation - Supplied as standard with the terminals kit



Different installation conditions shall be type tested

	No accessories			Terminal cover (LTC)			High terminal cover (HTC)			Phase barriers 25mm			Phase Barriers 100mm			Phase barriers 200mm		
	T	D	L	T	D	L	T	D	L	T	D	L	T	D	L	T	D	L / L ⁽⁵⁾
U < 500V AC	30	25	25	5	0	25	10	10	25	10	10	25	10	10	25	0	0	25
500V AC ≤ U ≤ 690V AC	Not allowed			35	20	25	40	40	25 ⁽⁷⁾	35	20 ⁽⁶⁾	25	10	10	25	0	0	50

(5) In case of ES terminals, this distance shall be assumed from the most external edge of the terminals

(6) In case of supply side bottom, D=60mm

(7) With ES and HTC L=50mm

- Usare cavi/barre isolate o capocorda isolati o eseguire prove di tipo specifiche sull' installazione.
- Use insulated cables/bars or insulated cable terminals or perform specific type tests on the installation.
- Isolierte Kabel/Sammelschienen oder isolierte Kabelschuhe verwenden oder spezifische Typprüfungen an der Anlage ausführen.
- Utiliser câbles/barres isolées ou des cosSES isolées ou réaliser un test de type spécifique sur l'installation.
- Usar cables/barras aislados o terminales aislados o bien ejecutar pruebas de tipo específicas en la instalación.
- 在安装时使用绝缘电缆/绝缘杆，或绝缘接线片，或执行特定的测试。

Terminal type			F	EF	ES	R	FC CuAl 1x35...185mm ² 1x120...240mm ²	FC CuAl 2x70...240mm ²
U _e ≤ 250V	Supply side	BOTTOM/TOP						
		Back shield	-	S _T	S _T	S _T	-	S _T
		Phase barrier	-	S _T - 100 mm	S _T - 200 mm	-	-	S _T - 100 mm
250V < U _e ≤ 500V	Supply side	BOTTOM/TOP						
		Back shield	Required ⁽¹⁾	S _T	S _T	S _T	Required ⁽¹⁾	S _T
		Phase barrier	S _{CB} - 25 mm	S _T - 100 mm	S _T - 200 mm	-	S _{CB} - 25 mm	S _T - 100 mm
U _e > 500V	Supply side	BOTTOM/TOP						
		Back shield	Required ⁽³⁾	S _T	S _T	S _T	Required ⁽³⁾	S _T
		Phase barrier	S _{CB} - 25 mm	S _T - 100 mm	S _T - 200 mm	-	S _{CB} - 25 mm	S _T - 100 mm
U _e > 500V	Supply side	BOTTOM/TOP						
		Terminal cover	(2)	-	-	S _T	(2)	(2)

(1) Use back shield code 1SDA112971R1(3p), 1SDA112972R1(4p) or alternatively insulate back panel of the enclosure, if bare metal, according to figure 4

(2) Insulation of the panel, shown in figure 4, can be avoided if high terminal covers and back shield are used

(3) Use back shield code 1SDA112971R1(3p), 1SDA112972R1(4p)

(4) Insulation of the back panel, shown in figure 4, is mandatory

S_{CB} - Mandatory installation - Supplied as standard with circuit-breaker, not available in the loose terminals kit

S_T - Mandatory installation - Supplied as standard with the terminals kit





Different installation conditions shall be type tested

	No accessories	Terminal cover (LTC)	High terminal cover (HTC)	Phase barriers 25mm	Phase Barriers 100mm	Phase barriers 200mm
	T D L	T D L	T D L	T D L	T D L	T D L / L ⁽⁵⁾
U ≤ 500V DC	Not allowed	40 0 25	40 40 25	40 40 25	10 10 25	0 0 25
500V DC < U ≤ 750V DC	Not allowed	40 20 25	60 60 50	60 60 50	10 10 50	0 0 50

(5) In case of ES terminals, this distance shall be assumed from the most external edge of the terminals


For fixed version at $U_e \geq 500\text{ V}$, with supply from lower terminals use insulating plate at the customer's charge max thickness 1mm or alternatively code 1SDA112971R1(3p), 1SDA112972R1(4p) to be ordered separately.

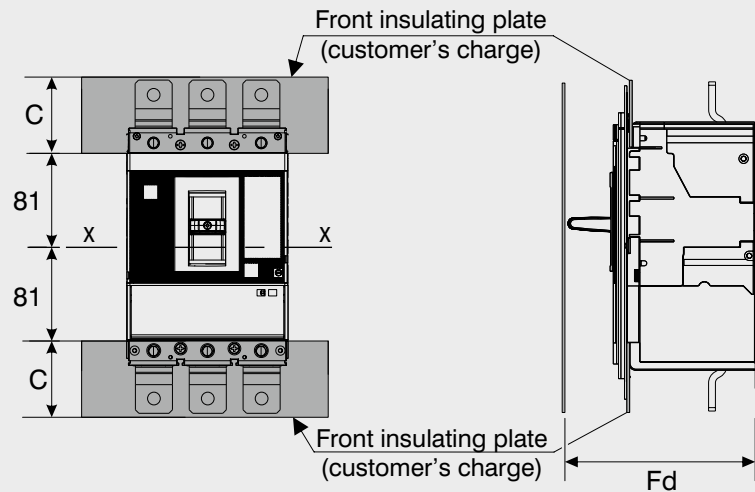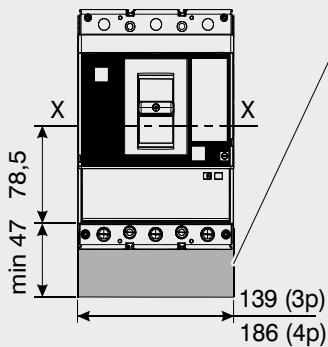

At 690V insulate front panel of the enclosures only for XT5 with breaking capacity L, V, X

Dimension C must be chosen in order to cover all the height of the front door/back panel


To avoid enclosures door insulation $F_d \geq 156\text{mm}$

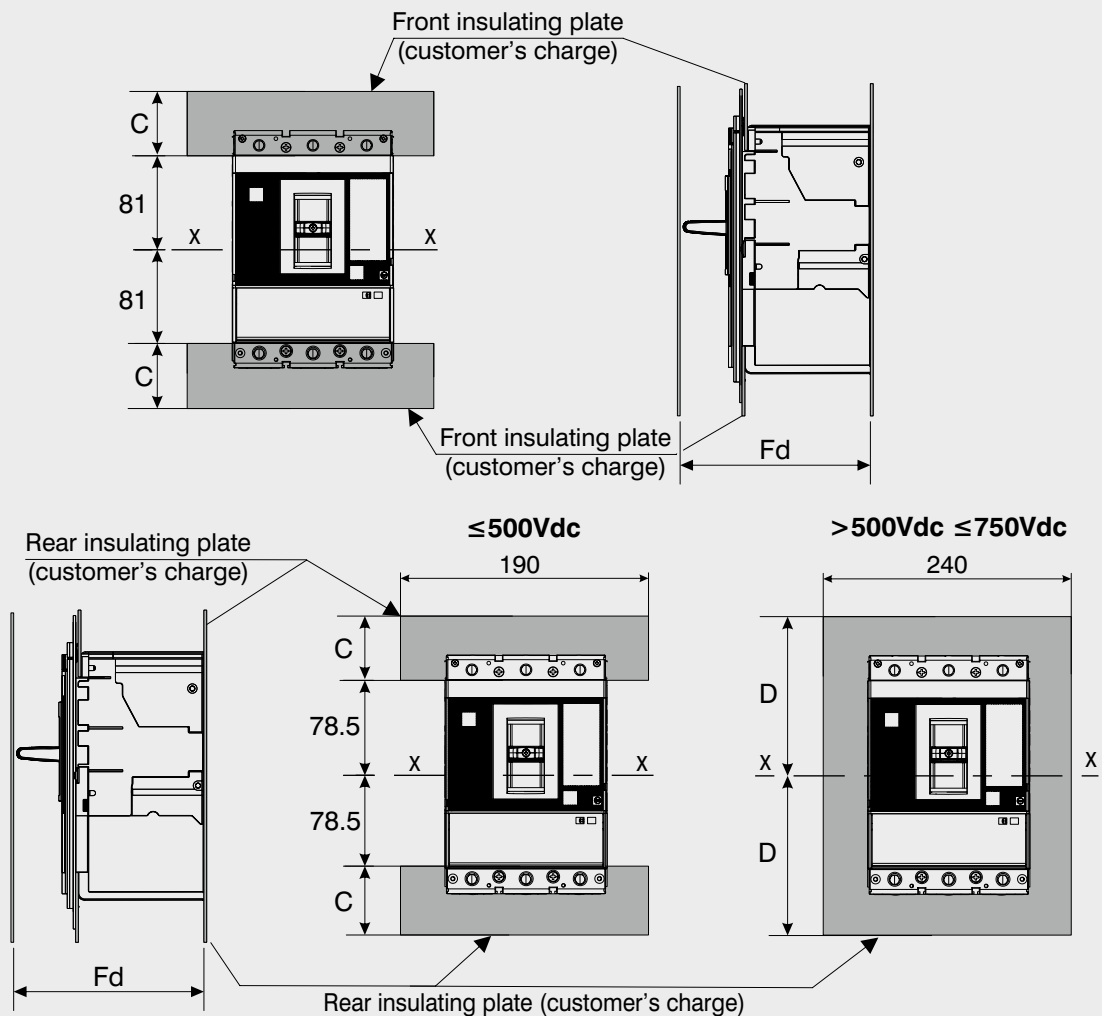




Dimension C,D must be chosen in order to cover all the height of the front door/back panel


To avoid enclosures door insulation $F_d \geq 156\text{mm}$

250V - GROUNDED - UNGROUNDED
500V - UNGROUNDED

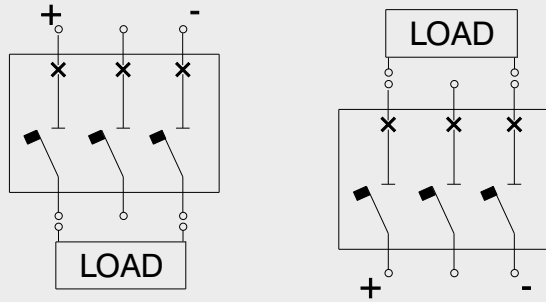


500V - GROUNDED
750V UNGROUNDED - Only for V, X versions

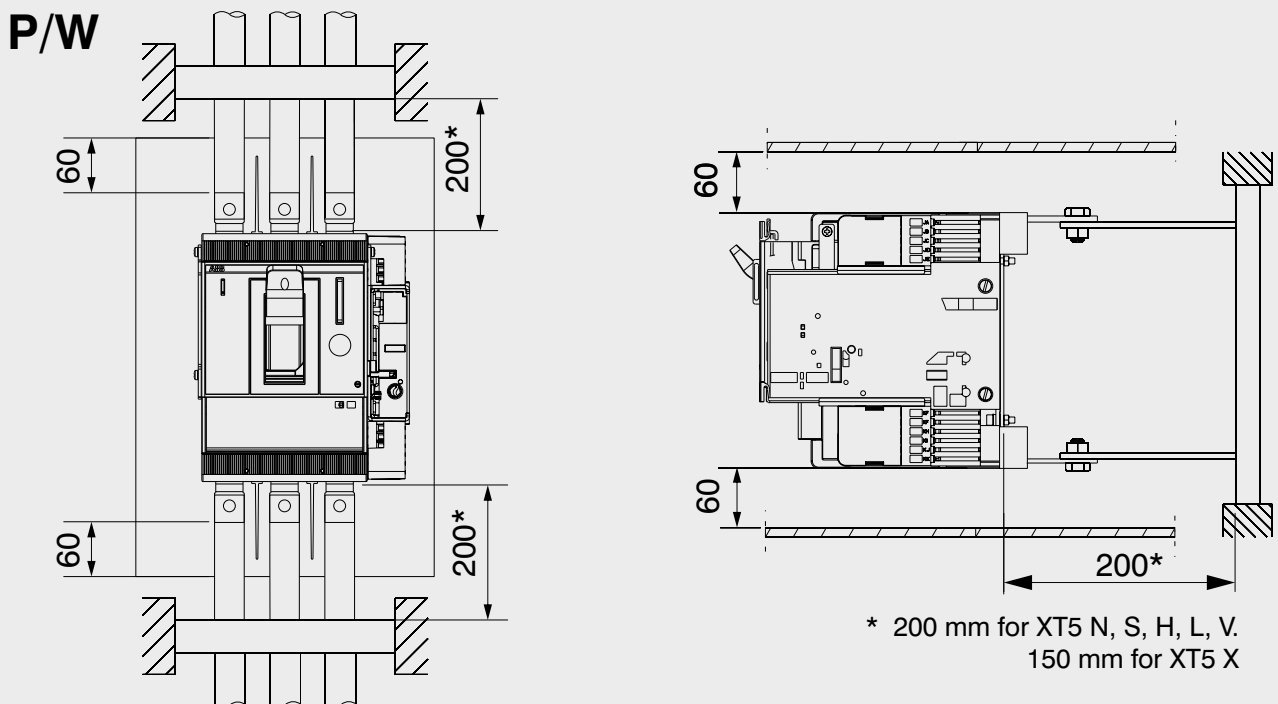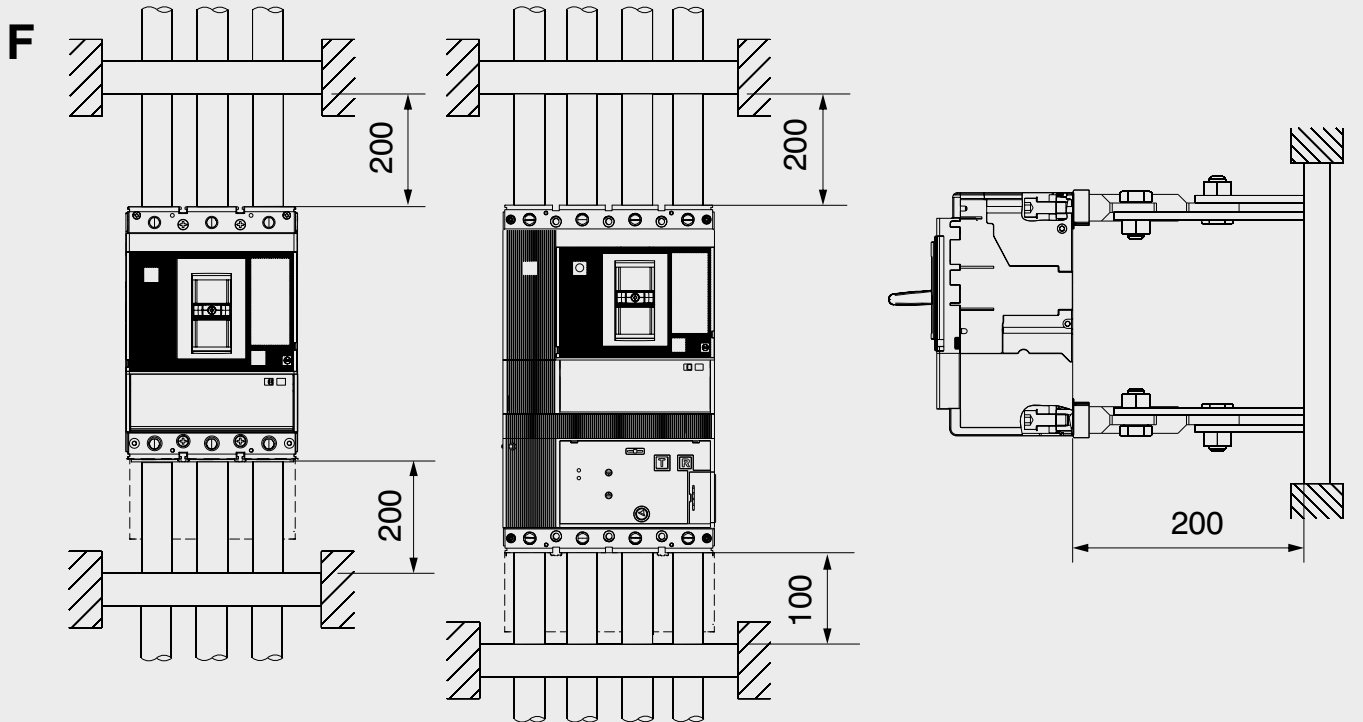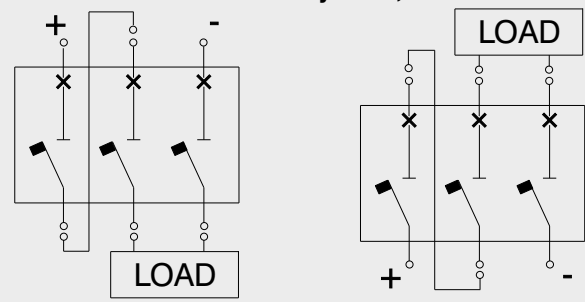


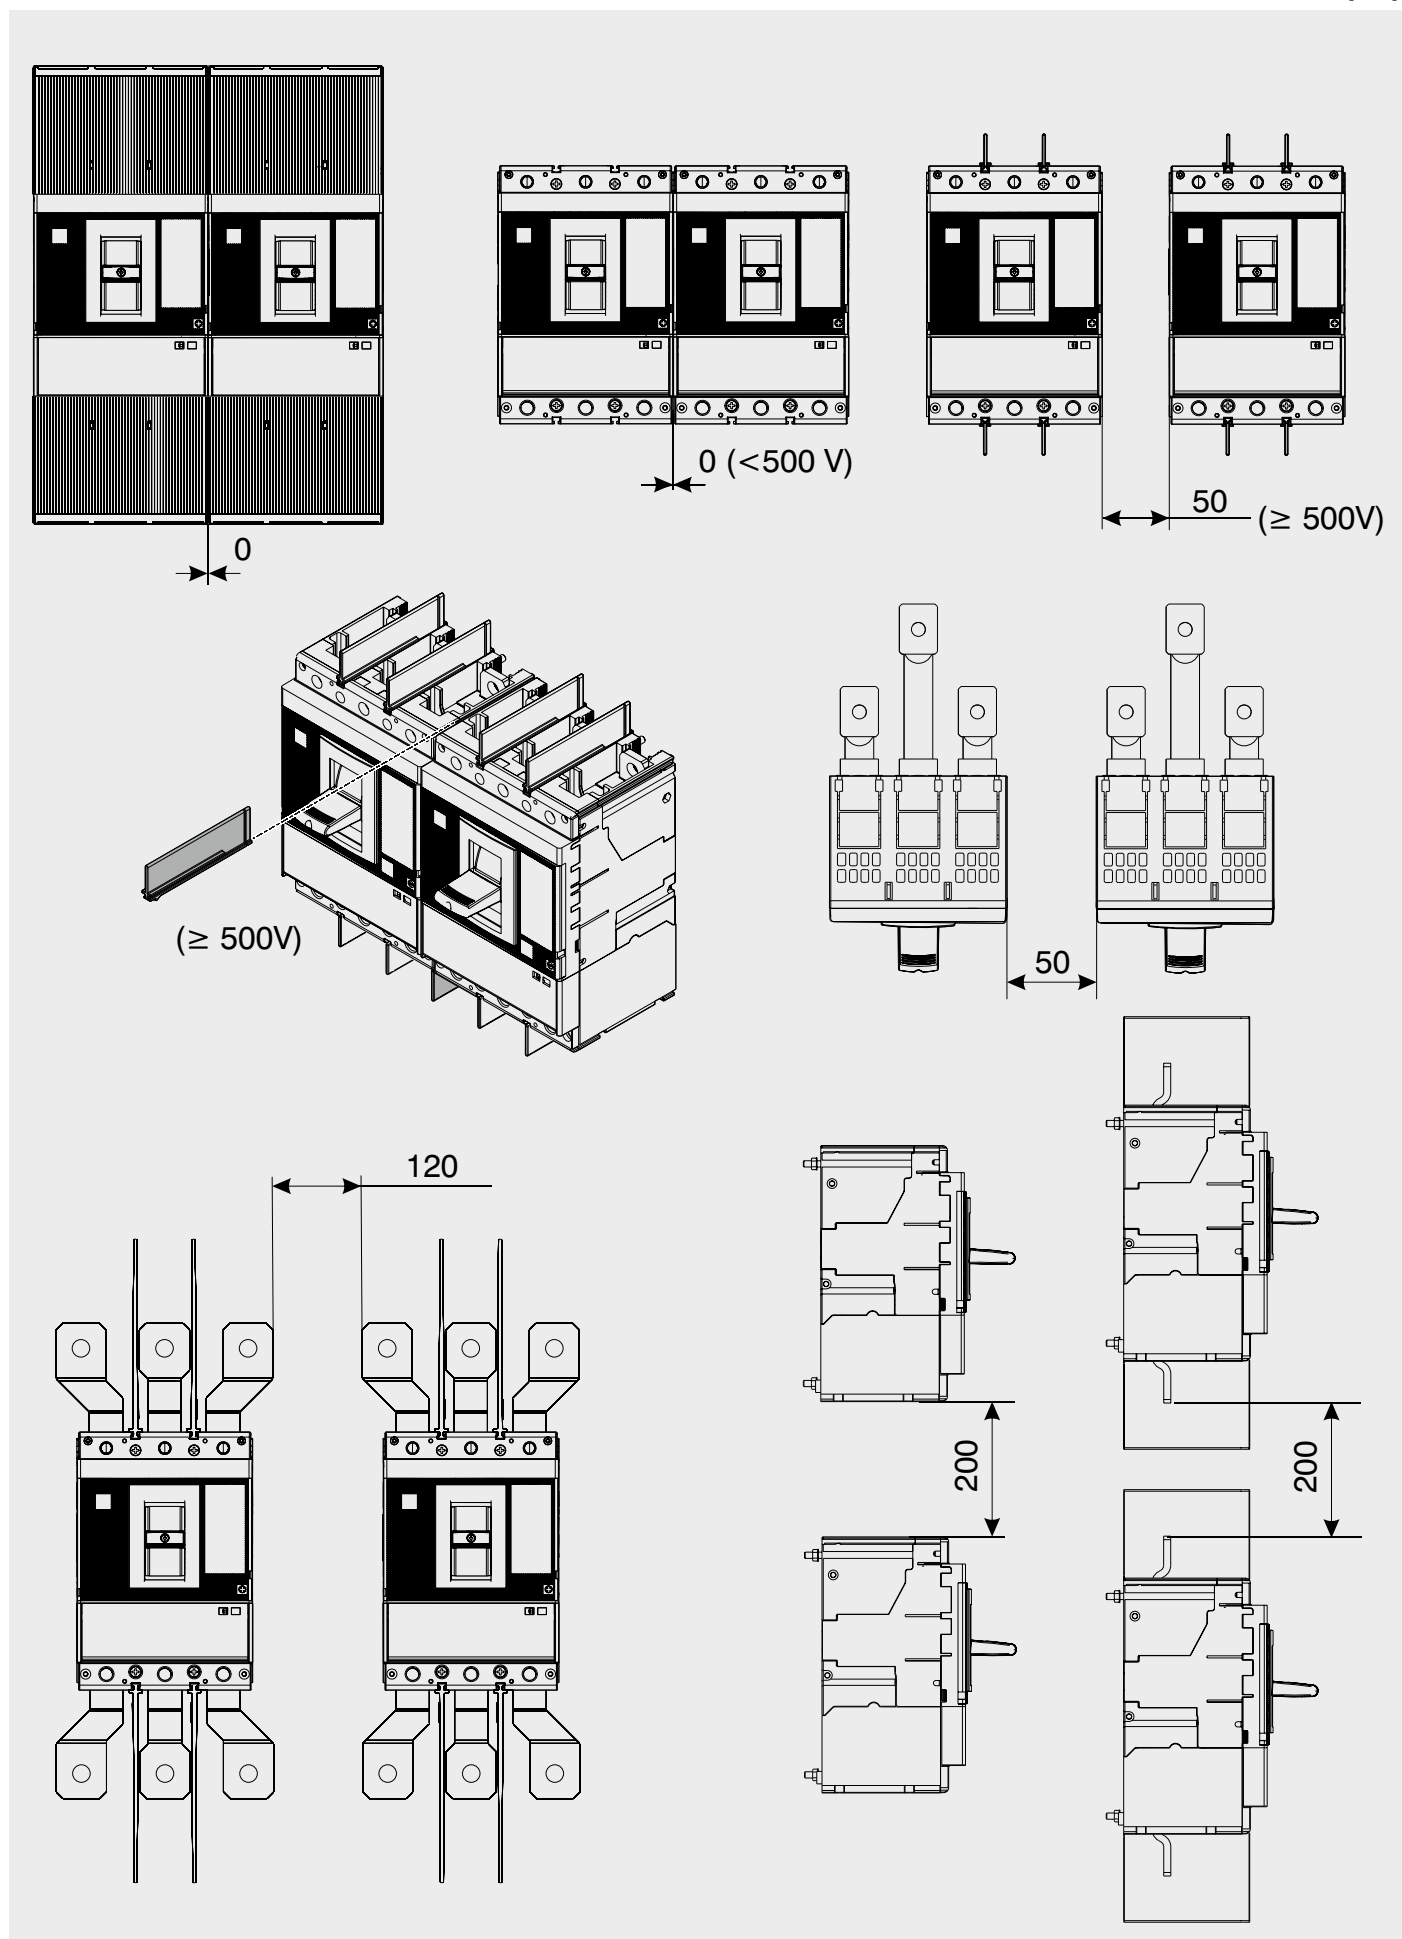



8 Example for Fixed breaker with F terminals lower

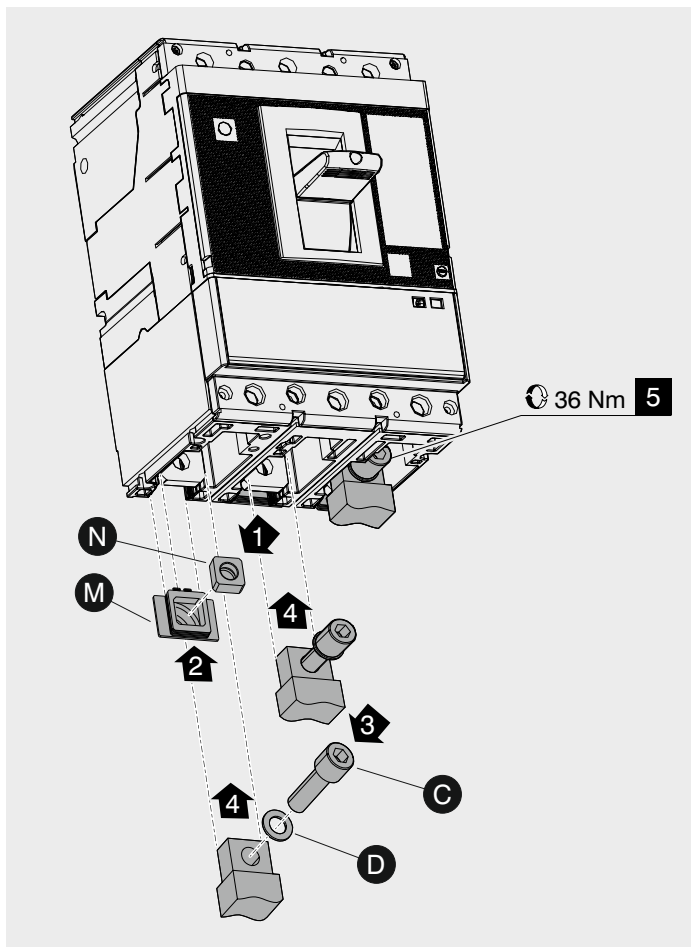


9 Example for Fixed breaker with F terminals upper

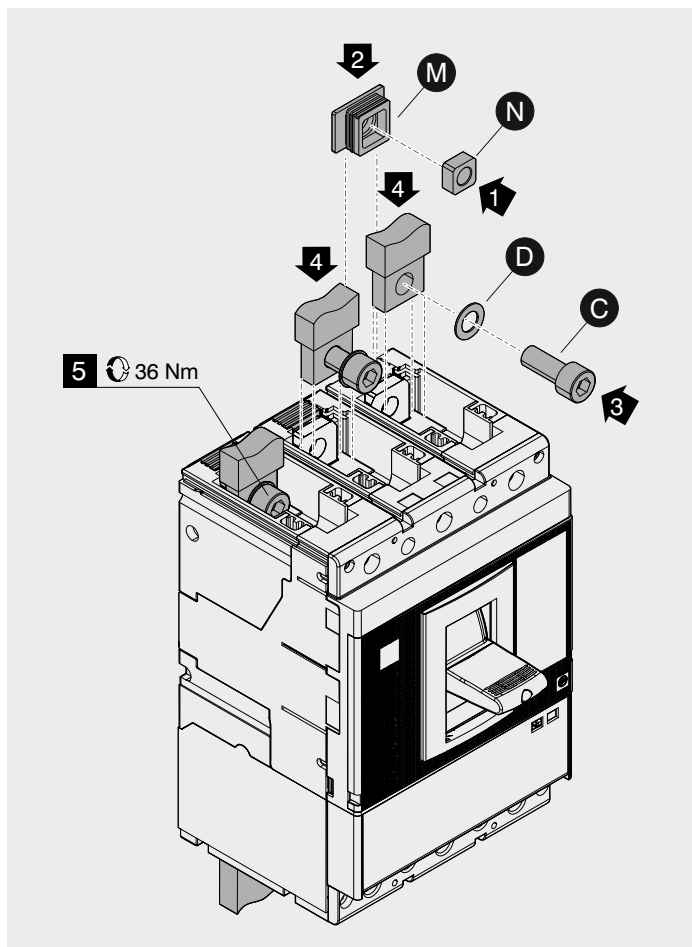


10 Example for F and $U_e \geq 500V$, supply side on lower terminals **11** Example for F and $U_e \geq 500V$, supply side on lower terminals

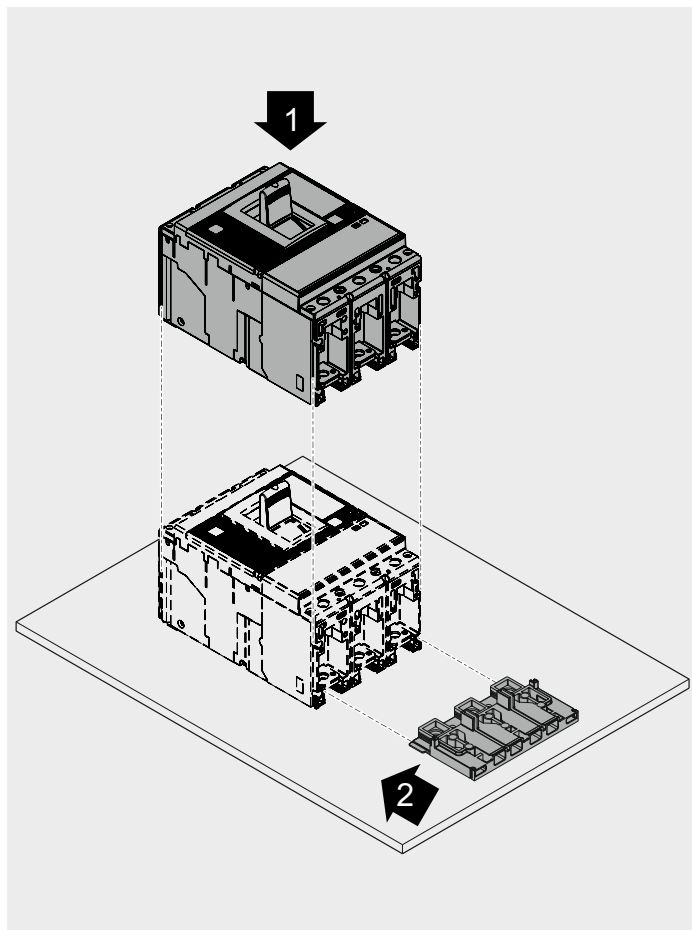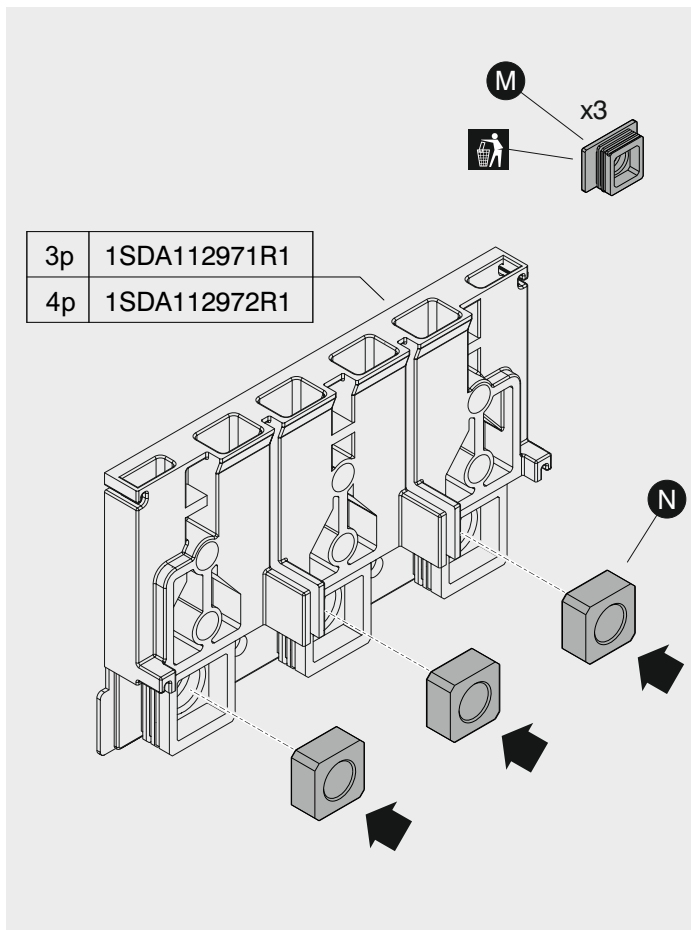


12 Example for F and $U_e \geq 500V$, supply side on lower terminals

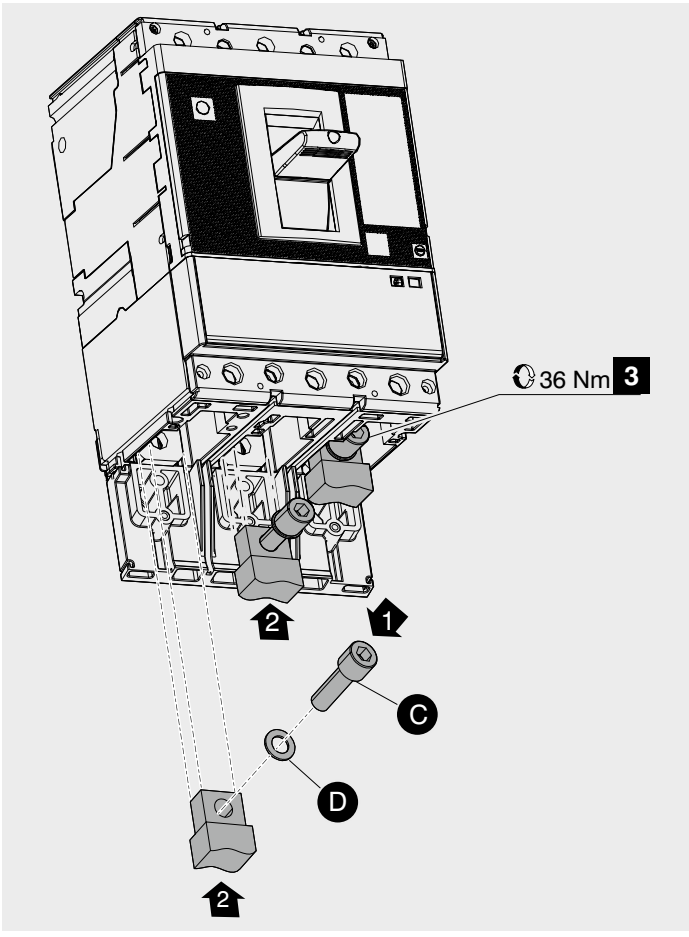


14


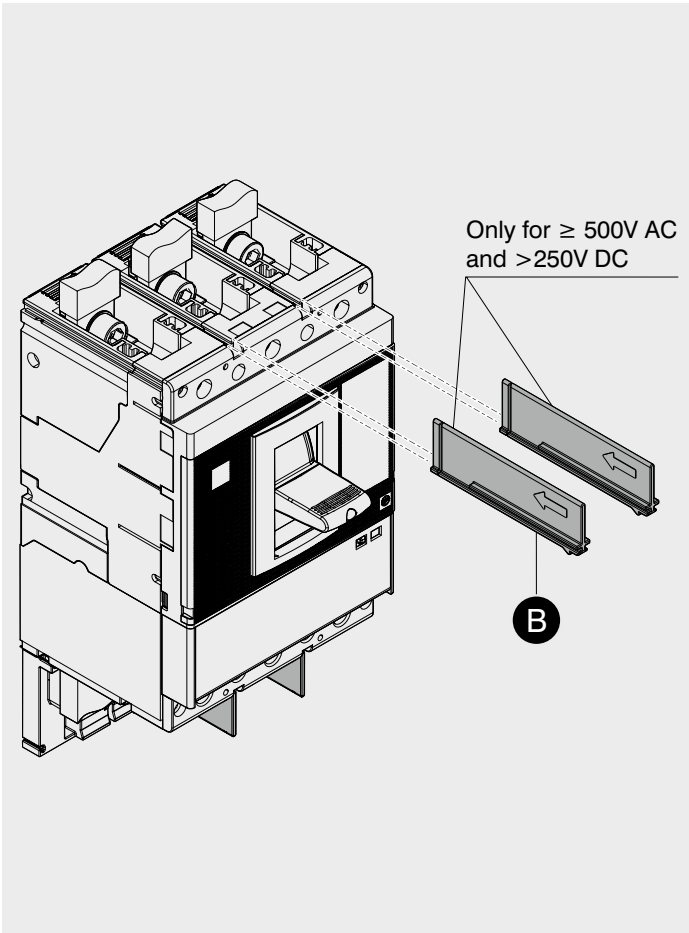


13 Example for F and $U_e \geq 500V$, supply side on lower terminals

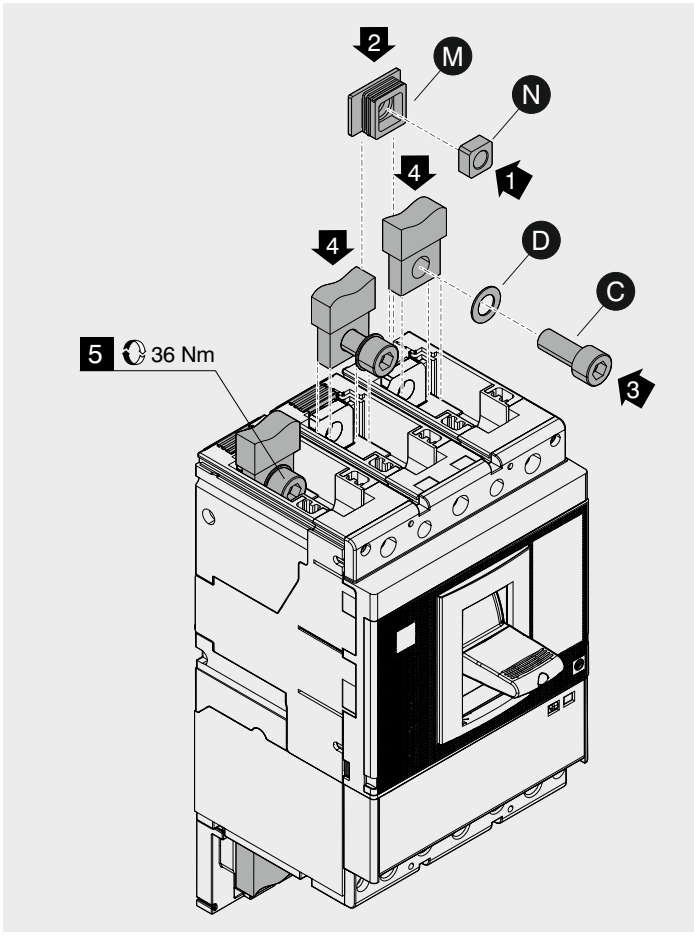

15

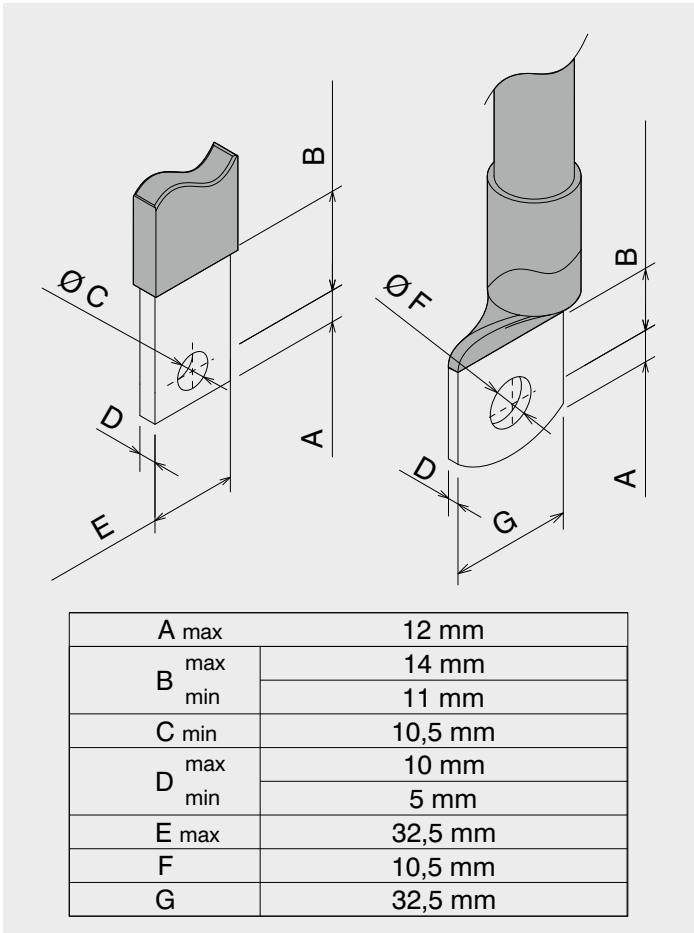

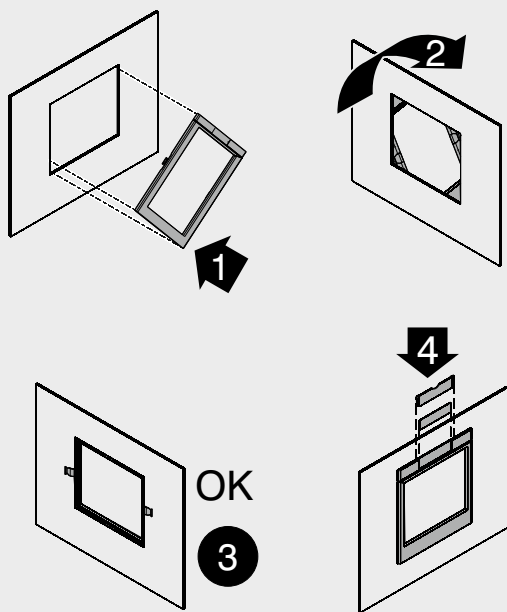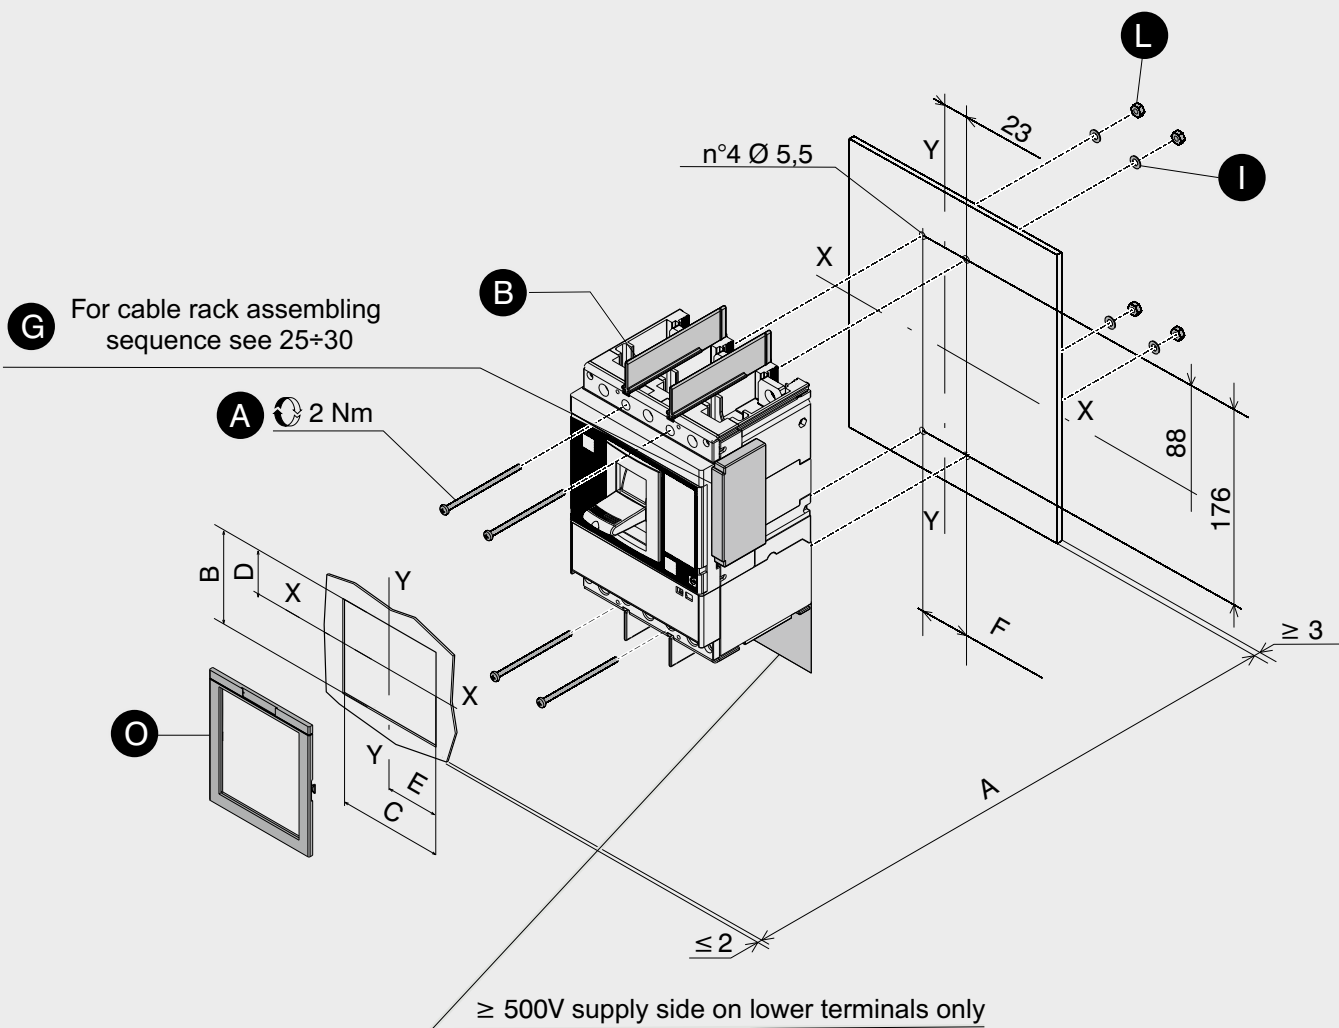


WITHOUT FLANGE SENZA MOSTRINA		A	B	C	D	E	F
	3p	108	165	143	82,5	71,5	46,5
	4p						93

WITH FLANGE CON MOSTRINA		A	B	C	D	E	F
	3p	108	174	152	87	76	46,5
	4p						93

17


XT5 400 3p-4p P

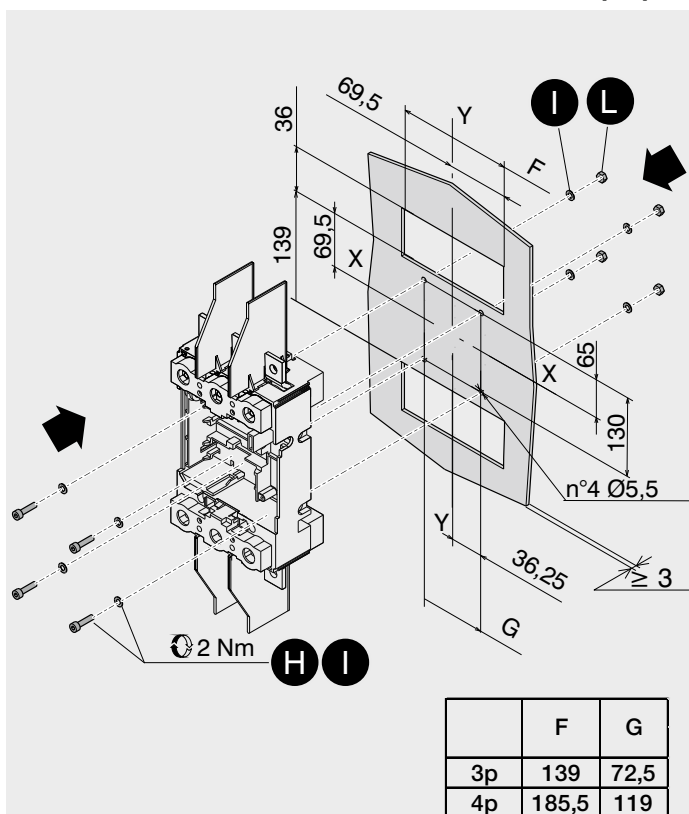

Example for mounting at 50mm.
For mounting at 72mm see 2TFH000004A1001

18

XT5 630 3p-4p P

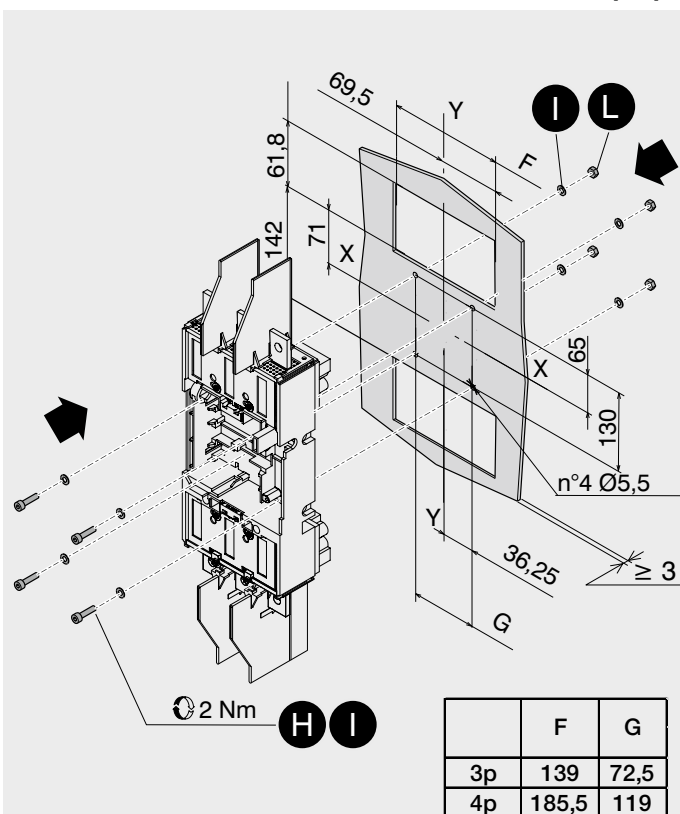

19

XT5 3p-4p P

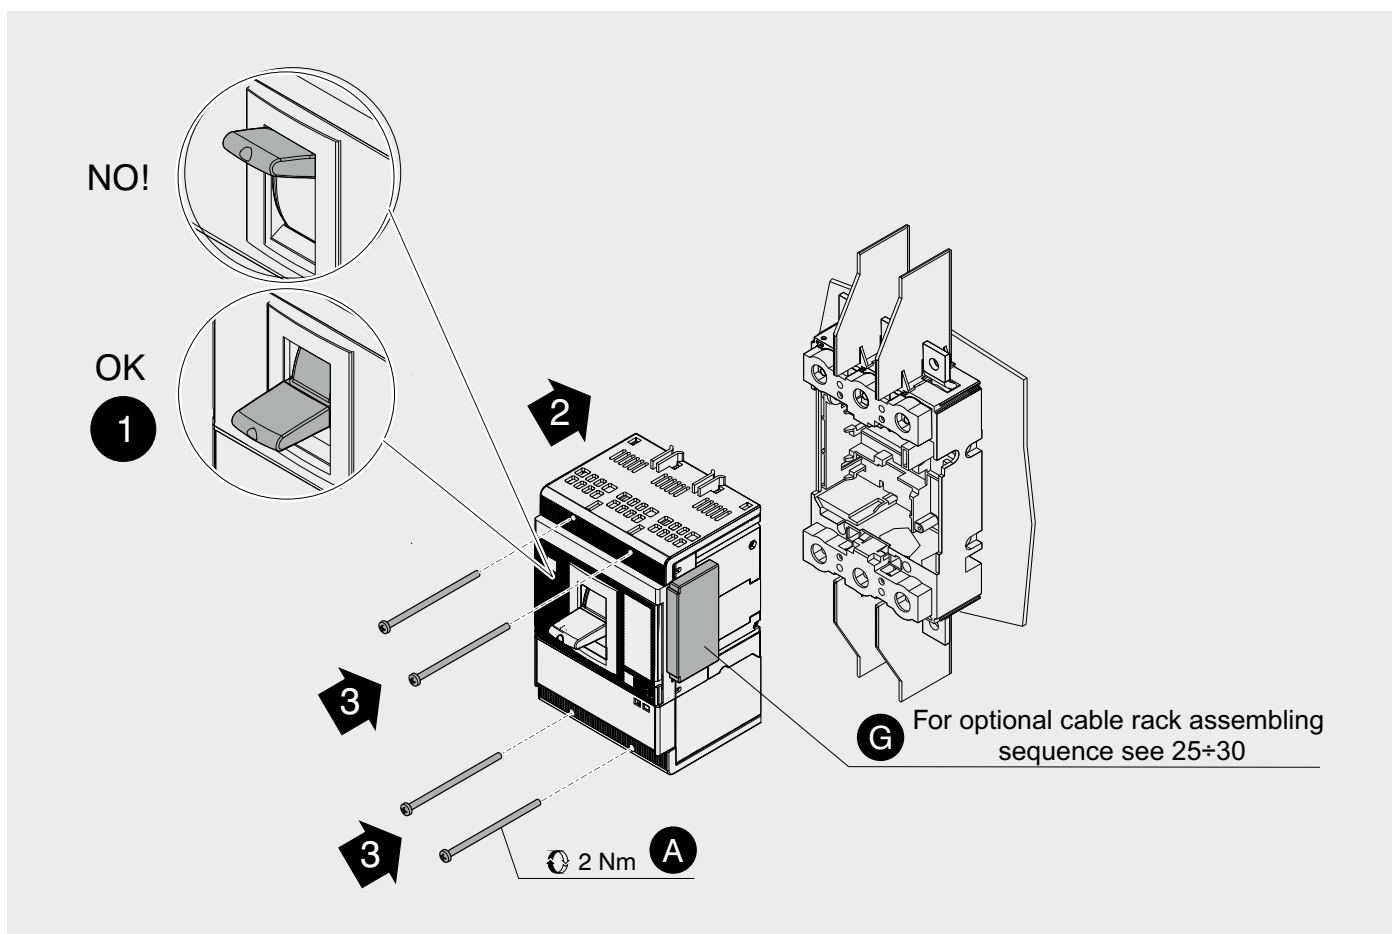


Diagram illustrating the installation of the XT5 3p-4p P terminal block. The main view shows the terminal block with dimensions A, B, C, D, E, X, Y, and a flange O. A secondary view shows the flange being inserted into the terminal block in four steps: 1. Insert flange, 2. Push flange, 3. OK, 4. Final position.

WITH FLANGE CON MOSTRINA		A	B	C	D	E
3p-4p		158	174	152	87	76

WITHOUT FLANGE SENZA MOSTRINA		A	B	C	D	E
3p-4p		158	165	143	82,5	71,5



Diagram illustrating the installation of the XT5 400 3p-4p W terminal block. The main view shows the terminal block with dimensions F, G, X, Y, and a flange O. A secondary view shows the flange being inserted into the terminal block in four steps: 1. Insert flange, 2. Push flange, 3. OK, 4. Final position.




	F	G
3p	139	72,5
4p	185,5	119




Example for mounting at 50mm.
For mounting at 72mm see 2TFH000005A1001



Diagram illustrating the installation of the XT5 630 3p-4p W terminal block. The main view shows the terminal block with dimensions F, G, X, Y, and a flange O. A secondary view shows the flange being inserted into the terminal block in four steps: 1. Insert flange, 2. Push flange, 3. OK, 4. Final position.

	F	G
3p	139	72,5
4p	185,5	119

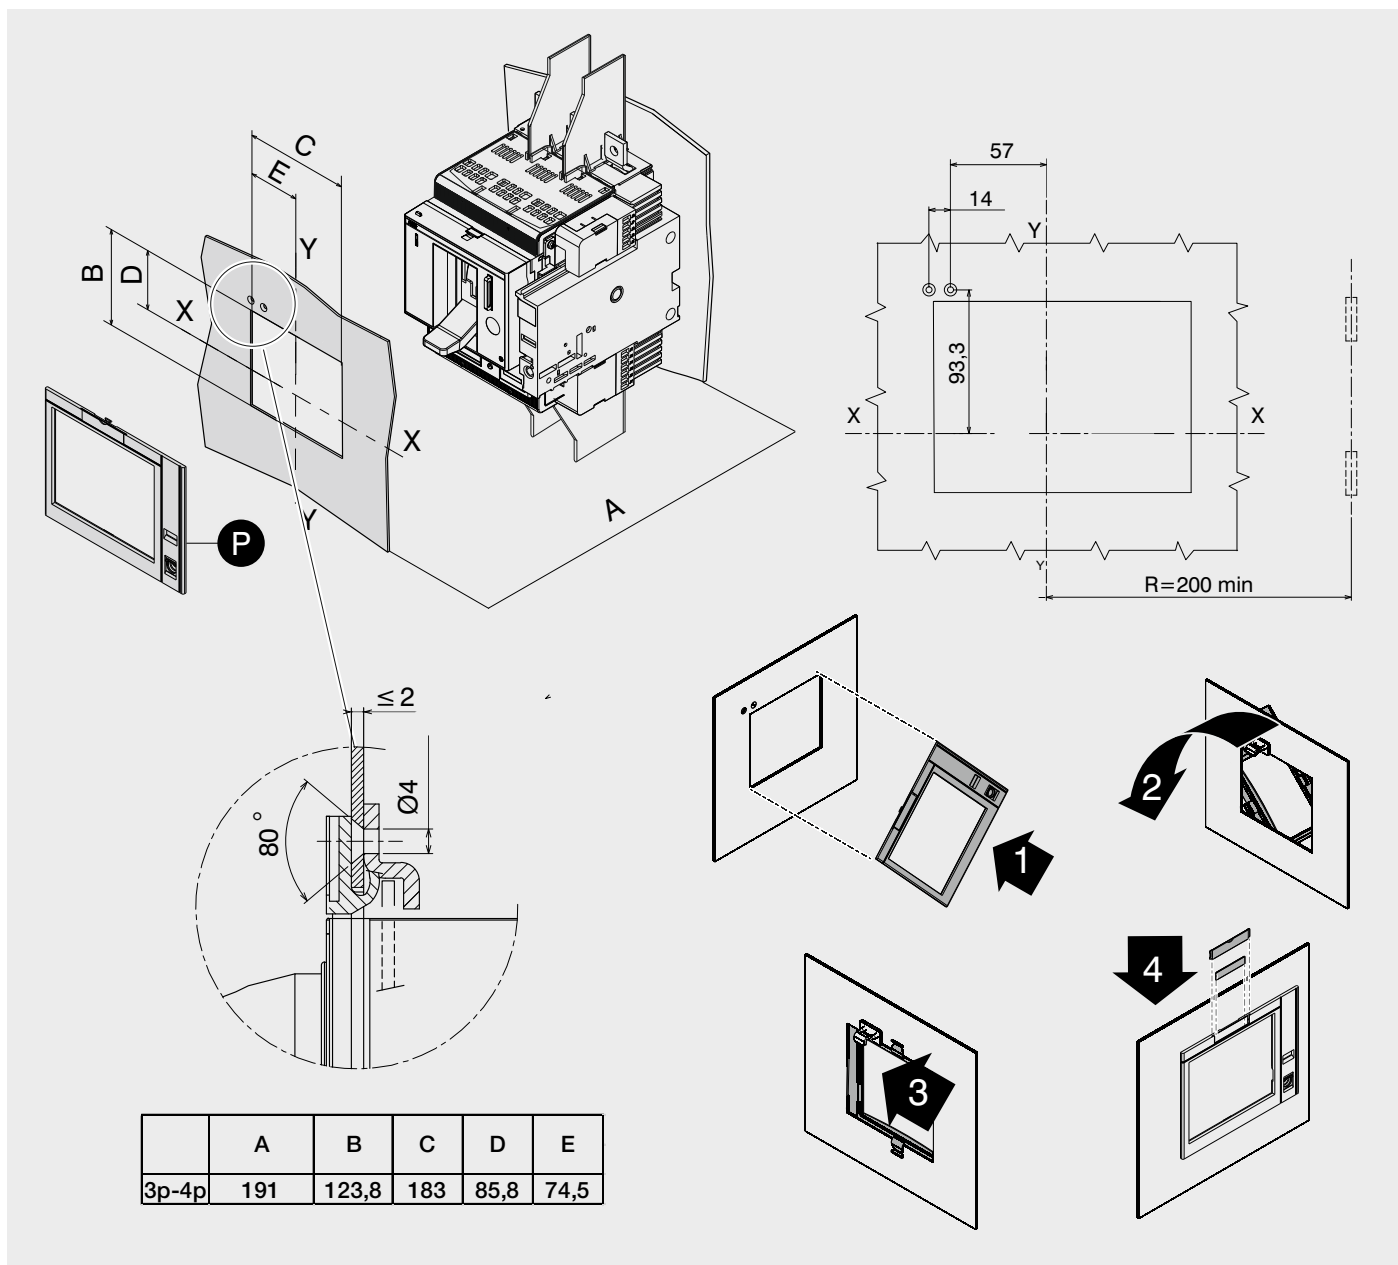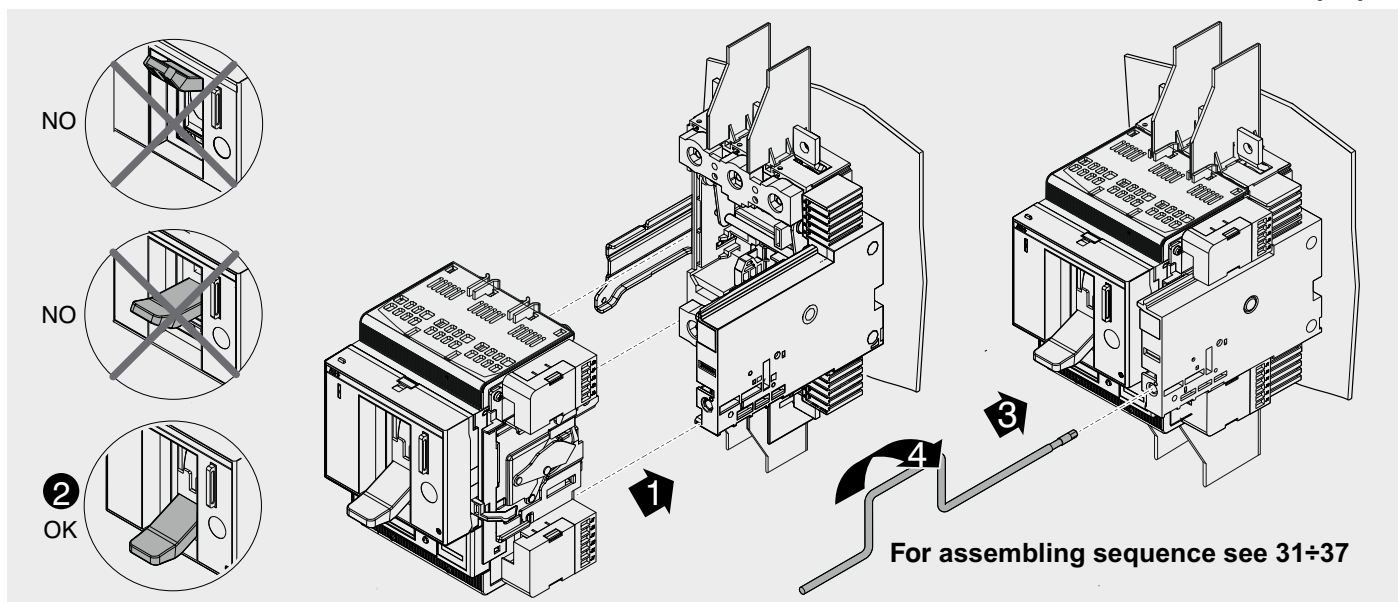

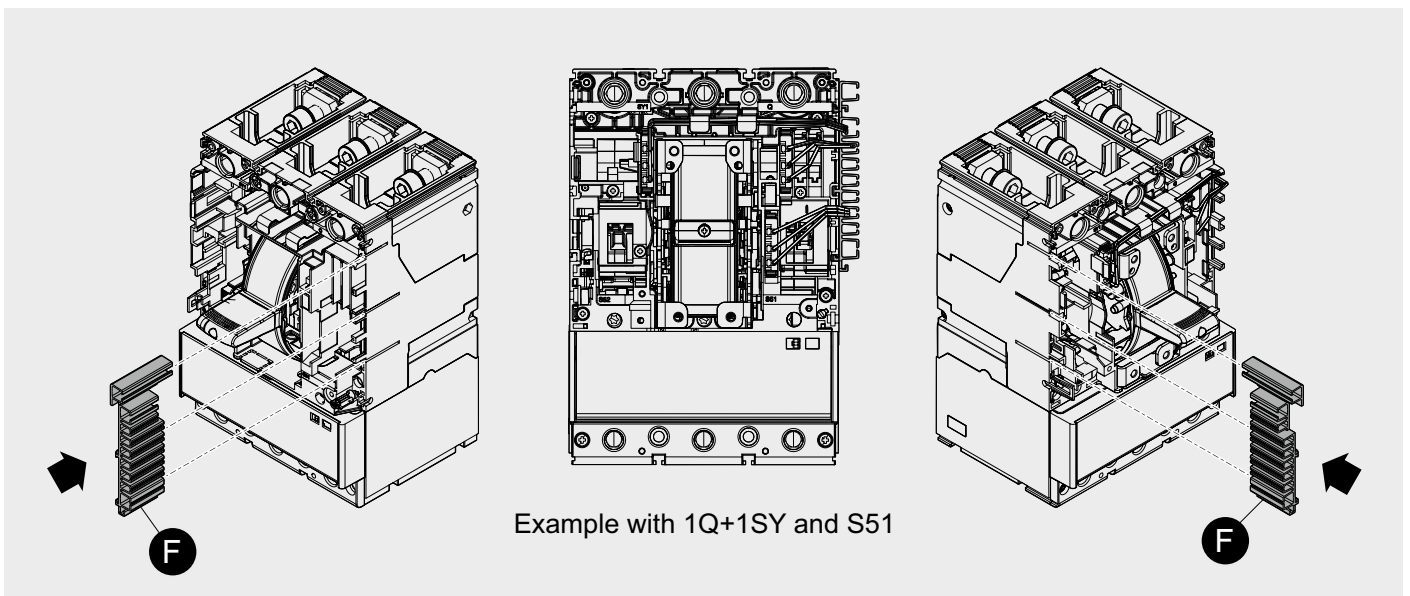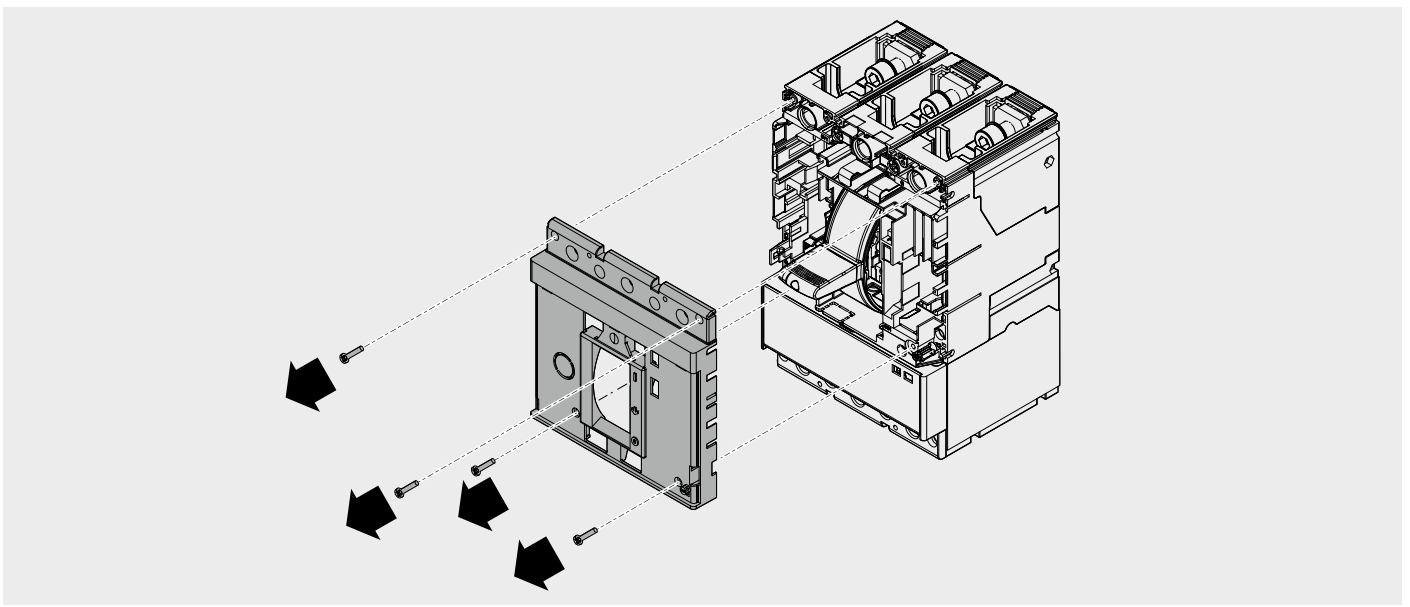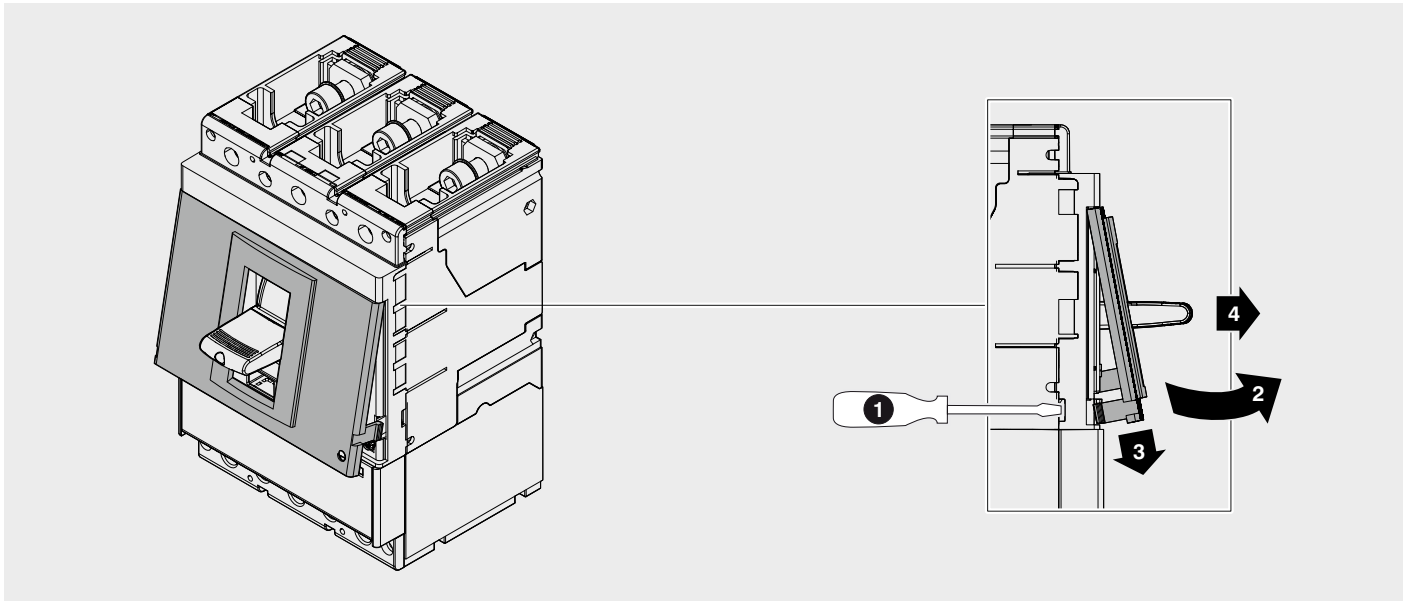

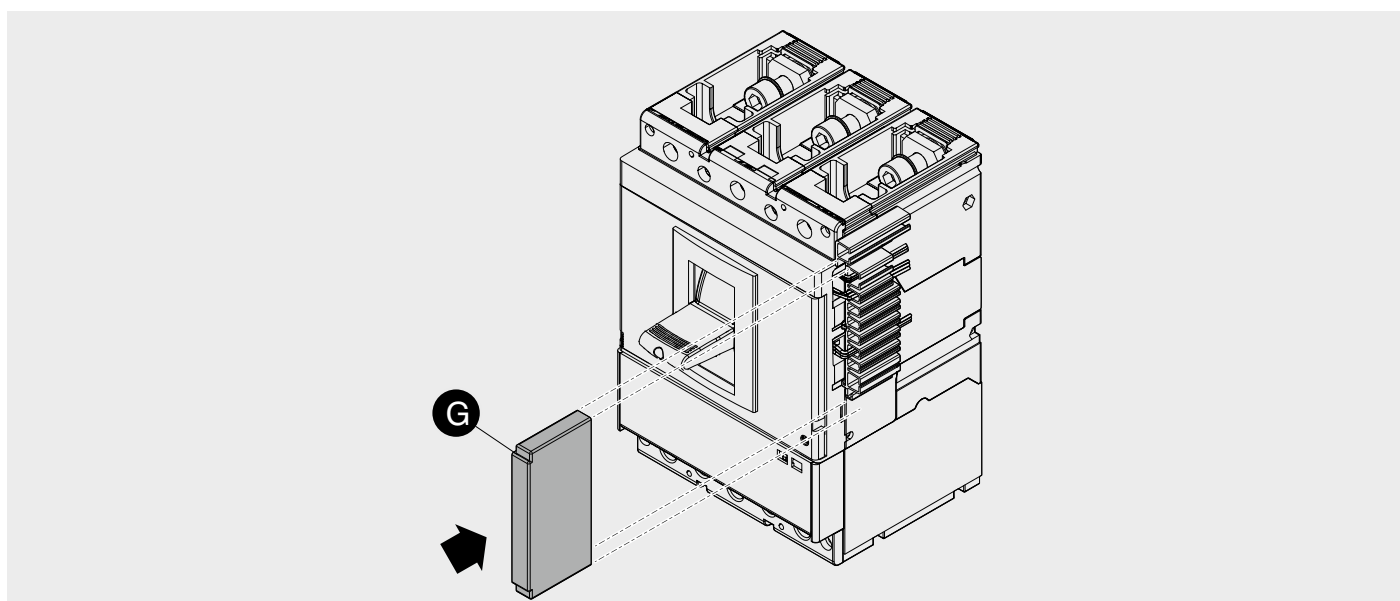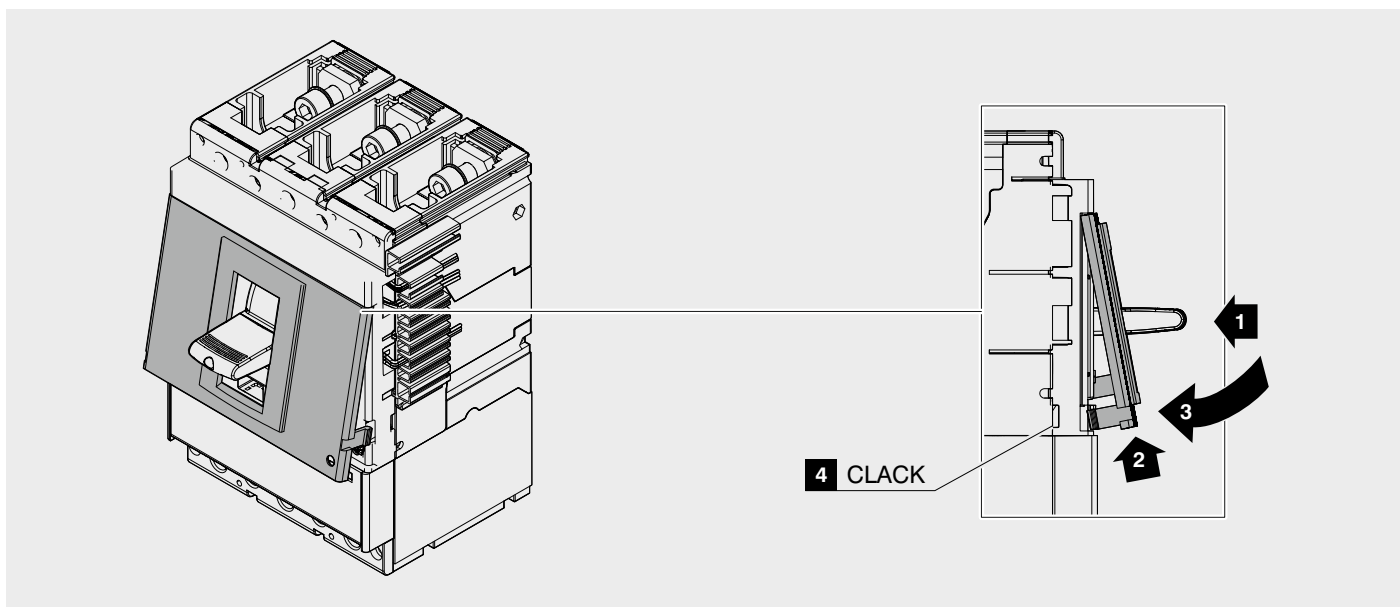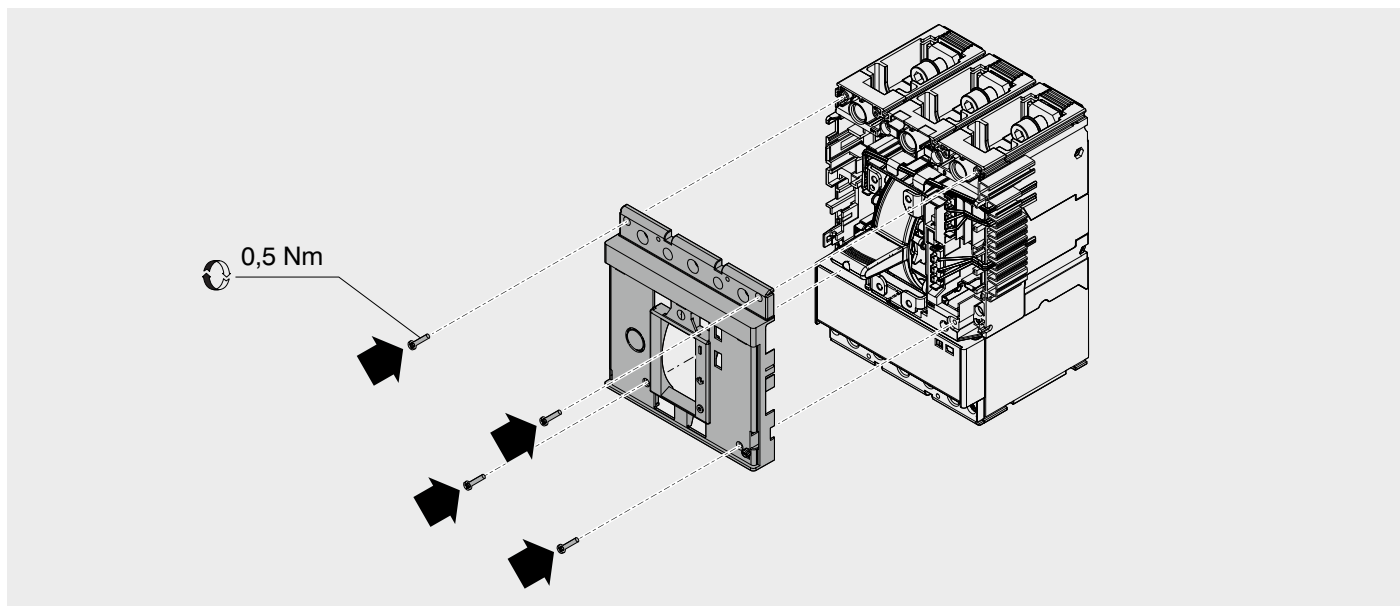

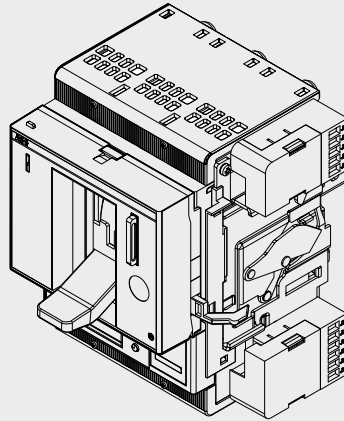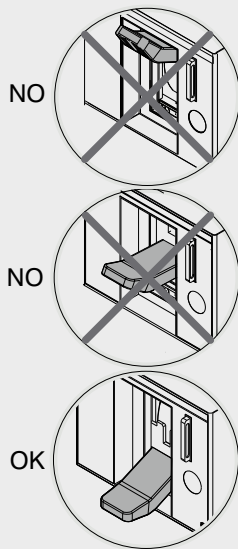

Portare l'interruttore in posizione "Open"


Switch the circuit-breaker to the "Open" position

Den Leistungsschalter in Position "Open" bringen

Placer le disjoncteur en position "Open"

Poner el interruptor en posición "Open"

将断路器切换到“Open”位置

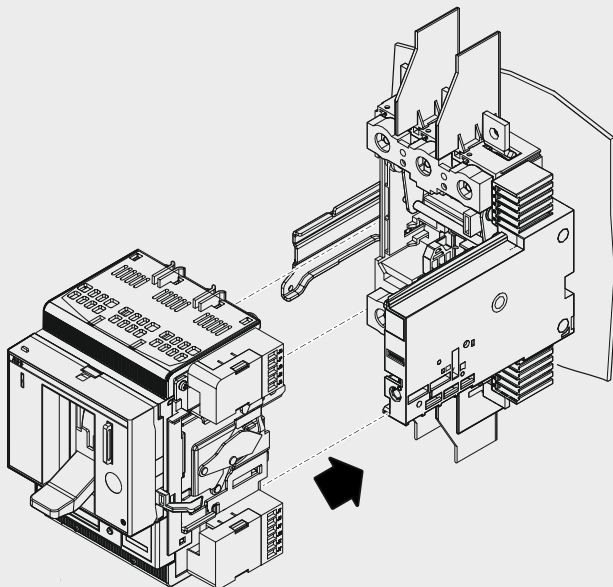

Posizionare la parte mobile nella parte fissa e spingerla fino a quando va in arresto.


Position the moving part in the fixed part and push until it comes to a stop.

Das bewegliche Teil im festen Teil anordnen und es schieben, bis es anschlägt.

Placer la partie mobile dans la partie fixe et la pousser jusqu'à ce qu'elle arrive en butée.

Poner la parte móvil en la parte fija y empujarla hasta el bloqueo.

将活动部分调到固定部分的位置, 并向前推动至停下。

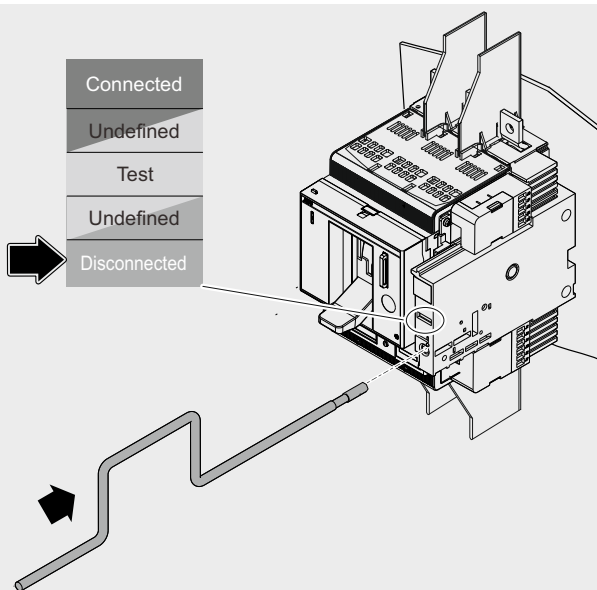

Inserire la manovella nella parte mobile. In questa fase la parte mobile è in posizione DISCONNECTED.


Insert the crank in the moving part. In this phase the moving part is in DISCONNECTED position.

Die Handkurbel in das bewegliche Teil stecken. In dieser Phase befindet sich das bewegliche Teil in der Position DISCONNECTED.

Introduire la manivelle dans la partie mobile. Dans cette phase la partie mobile est en position DISCONNECTED.

Introducir la manivela en la parte móvil. En esta fase la parte móvil está en posición DISCONNECTED.

往移动部分上插入摇把。这过程中, 移动部分仍处于 DISCONNECTED 位置。

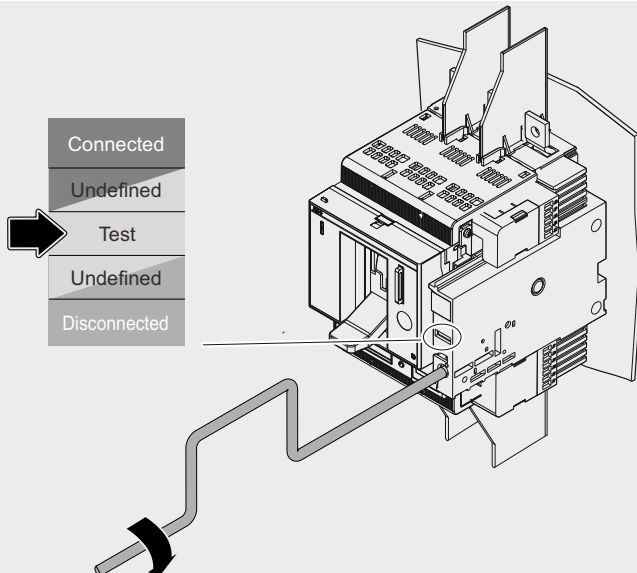

Ruotare la manovella in senso orario sino a quando il segnalatore indica che l'interruttore è in posizione TEST.


Turn the crank clockwise until the the indicator shows that the circuitbreaker is in TEST position.

Die Handkurbel im Uhrzeigersinn drehenDie Anzeige meldet die Stellung des Leistungsschalters in der Position TEST.

Tourner la manivelle dans le sens horaire jusqu'à ce que l'indicateur signale que le disjoncteur est en position TEST.

Girar la manivela en sentido horario hasta que el indicador señale que el interruptor está en posición TEST.

顺时针转动手柄，直到出且位置指示装置显示断路器已处于 TEST 位置为止

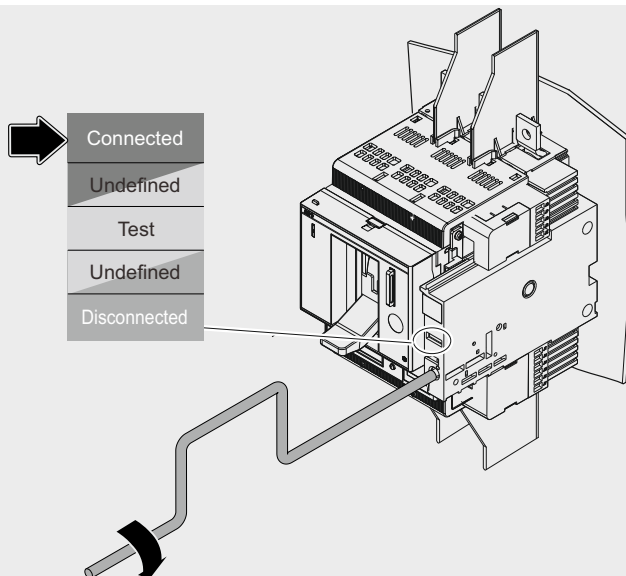

Ruotare la manovella in senso orario sino a quando il segnalatore indica che l'interruttore è in posizione CONNECTED.


Turn the crank clockwise until the the indicator shows that the circuitbreaker is in CONNECTED position.

Die Handkurbel im Uhrzeigersinn drehenDie Anzeige meldet die Stellung des Leistungsschalters in der Position CONNECTED.

Tourner la manivelle dans le sens horaire jusqu'à ce que l'indicateur signale que le disjoncteur est en position CONNECTED.

Girar la manivela en sentido horario hasta que el indicador señale que el interruptor está en posición CONNECTED.

顺时针转动手柄，直到出且位置指示装置显示断路器已处于 CONNECTED 位置为止

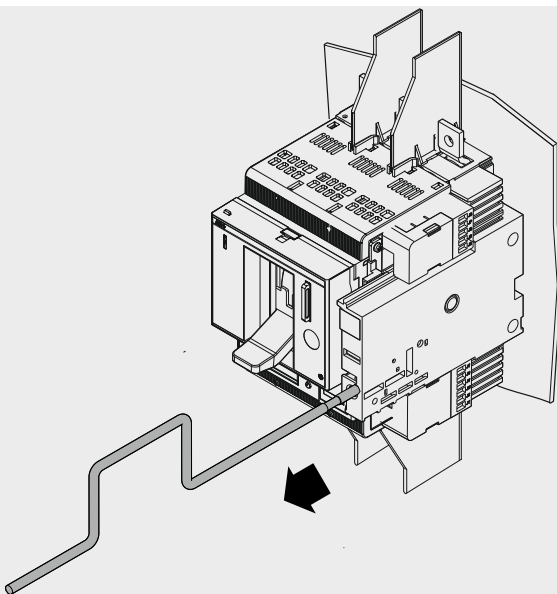

Estrarre la manovella. L'interruttore può essere chiuso.

Extract the crank. The circuit-breaker can be closed.

Die Handkurbel herausziehen. Der Leistungsschalter kann eingeschaltet werden

Extraire la manivelle. Le disjoncteur peut être fermé

Extraer la manivela. El interruptor se puede cerrar


取出摇柄。可对断路器进行闭合操作。

Terminali
Terminals
Anschlusse
Prises
Terminales
端子类型

Codici
Codes
Codes
Codes
Códigos
物料编号

Istruzioni d'installazione
Installation instructions
Installationsanleitung
Instructions pour l'installation
Instrucciones de instalación
安装说明


Dimensioni di ingombro
Overall dimensions
Abmessungen
Dimensions d'encombrement
Dimensiones generales
全部尺寸

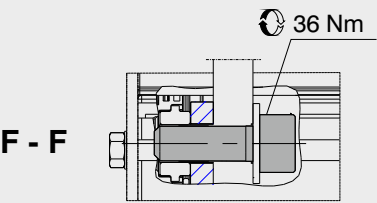

1SDA104730R1	3pcs
1SDA104731R1	4pcs

[1SDH002011A1801](#)


[1SDH002011A1101](#)

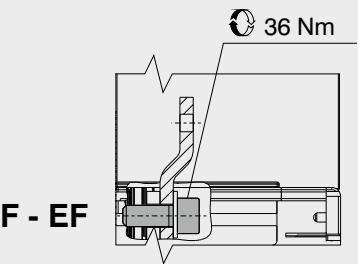

1SDA104734R1	3pcs
1SDA104735R1	4pcs

[1SDH002011A1802](#)


[1SDH002011A1103](#)

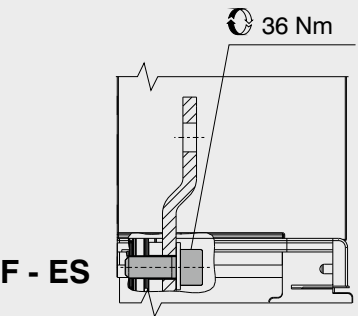

1SDA104738R1	3pcs
1SDA104739R1	4pcs

[1SDH002011A1803](#)

[1SDH002011A1104](#)

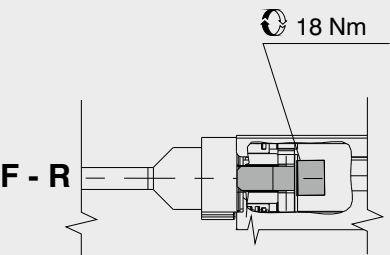

1SDA104760R1	3pcs
1SDA104761R1	4pcs

[1SDH002011A1807](#)

[1SDH002011A1102](#)

Terminali
Terminals
Anschlüsse
Prises
Terminales
端子类型

Codici
Codes
Codes
Codes
Códigos
物料编号


Istruzioni d'installazione
Installation instructions
Installationsanleitung
Instructions pour l'installation
Instrucciones de instalación
安装说明

Dimensioni di ingombro
Overall dimensions
Abmessungen
Dimensions d'encombrement
Dimensiones generales
全部尺寸

F/P/W - FC CuAl
35mm²/185mm²

1SDA104746R1	3pcs
1SDA104747R1	4pcs

[1SDH002011A1804](#)

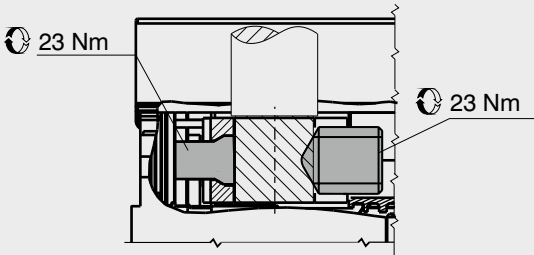


F/P/W - FC CuAl
120mm²/240mm²

1SDA104742R1	3pcs
1SDA104743R1	4pcs

[1SDH002011A1805](#)

[1SDH002011A1105](#)

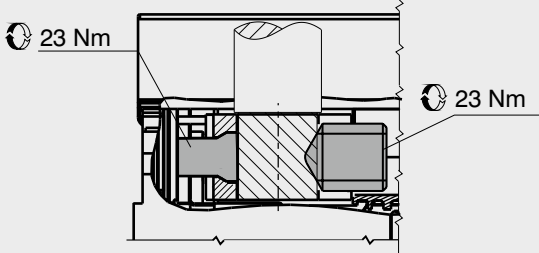


F/P/W - FC CuAl
2x70mm²/240mm²

1SDA104748R1	3pcs
1SDA104749R1	4pcs

[1SDH002011A1806](#)

[1SDH002011A1106](#)

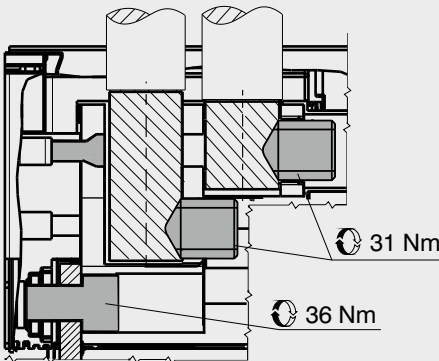

Terminali
Terminals
Anschlusse
Prises
Terminales
端子类型

Codici
Codes
Codes
Codes
Códigos
物料编号

Istruzioni d'installazione
Installation instructions
Installationsanleitung
Instructions pour l'installation
Instrucciones de instalación
安装说明


Dimensioni di ingombro
Overall dimensions
Abmessungen
Dimensions d'encombrement
Dimensiones generales
全部尺寸

P/W 400 - EF

1SDA104674R1	3pcs
1SDA104675R1	4pcs

[2TFH000019A1001](#)

[2TFH001004A1001](#)

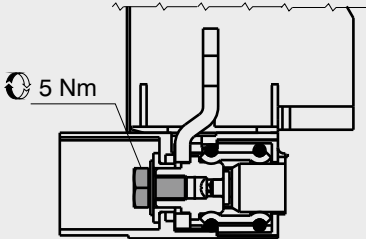


P/W 630 - EF

1SDA104766R1	3pcs
1SDA104767R1	4pcs

[2TFH000019A1001](#)

[2TFH001008A1001](#)

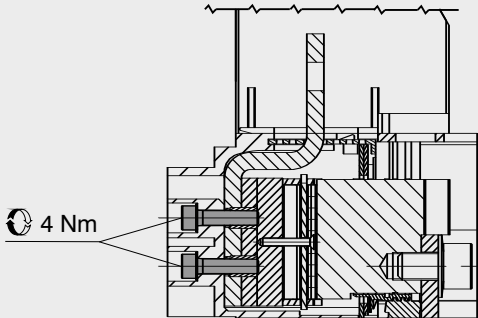

P/W 400 - HR/VR


1SDA104775R1	3pcs
1SDA104778R1	4pcs

[2TFH000023A1001](#)

[2TFH001005A1001](#)

1SDA104774R1	3pcs	Same Length
1SDA104777R1	4pcs	Same Length

[2TFH001006A1001](#)

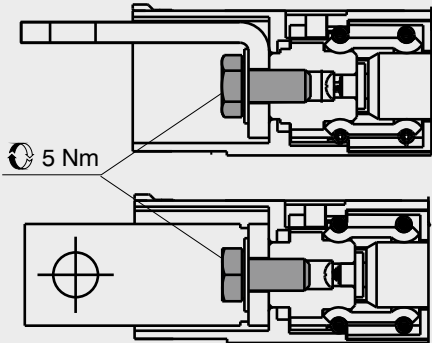

Terminali
Terminals
Anschlusse
Prises
Terminales
端子类型

Codici
Codes
Codes
Codes
Códigos
物料编号

Istruzioni d'installazione
Installation instructions
Installationsanleitung
Instructions pour l'installation
Instrucciones de instalación
安装说明


Dimensioni di ingombro
Overall dimensions
Abmessungen
Dimensions d'encombrement
Dimensiones generales
全部尺寸

P/W 630 - HR

1SDA104770R1	3pcs
1SDA104771R1	4pcs

[2TFH000022A1001](#)

[2TFH001007A1001](#)

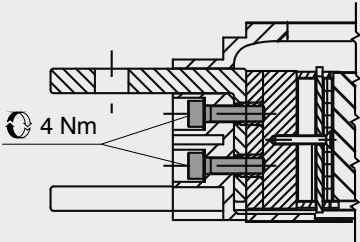



P/W 630 - VR

1SDA104780R1	3pcs
1SDA104781R1	4pcs



[2TFH000026A1001](#)

[2TFH001009A1001](#)




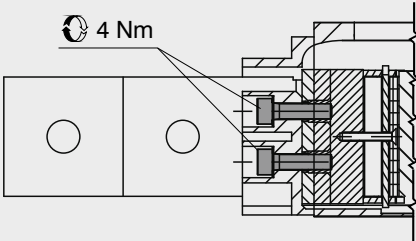


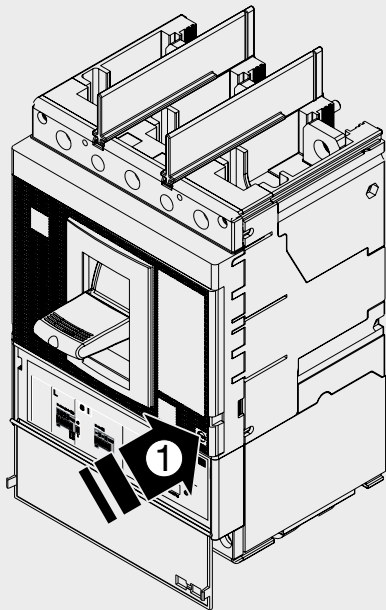

LED	Color	CONDITION Run time
	Green	LED ON (fixed) = Device active
L	Yellow	LED Fixed = L pre alarm ($0,9 * I1 < I < 1,2 * I1$)
L	Red	LED Blinking = L alarm ($I > 1,2 * I1$)
S	Red	LED Blinking = S alarm ($I > I2$)
L S I	Red	LED Blinking = Parameters inconsistency - L = S or L = I. LED Blinking without Parameters inconsistency = generic fault (please contact ABB)

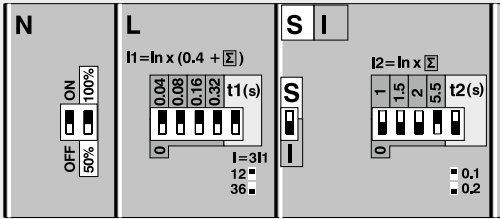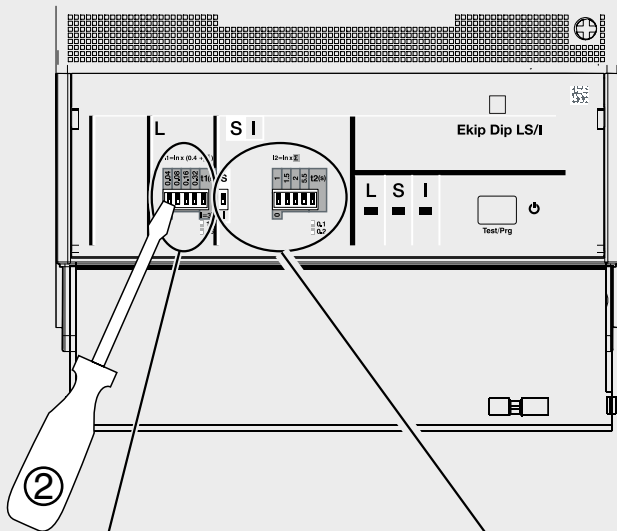


Settaggio di default
Default setting
Default-Einstellung
Configuration par défaut
Ajuste de default
默认设置

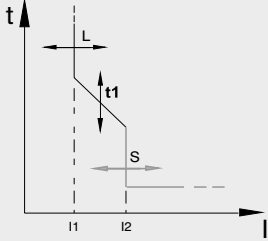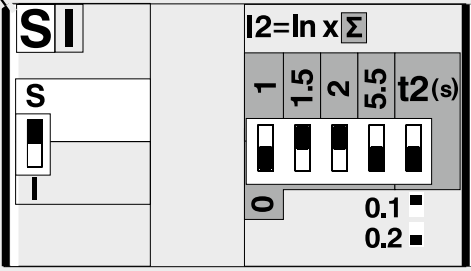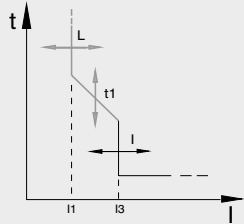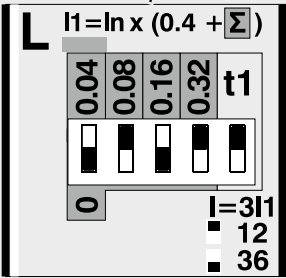

Esempio: $In = 400\text{ A}$
Example: $I1 = 400 \times (0.4 + 0.08 + 0.32) = 320\text{A}$
 $t1 = 12\text{ s @ } 240\text{ A } (3I1)$


Esempio: $In = 400\text{ A}$
Example: $I2 = 400 \times (1.5 + 2) = 1400\text{A}$
 $t2 = 0.2\text{ s @ } In > I2$

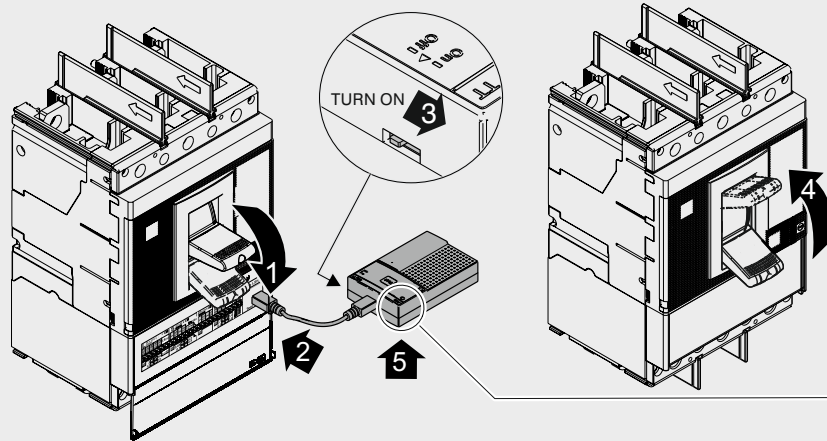

LED Ekip TT

Verde Green Grün Vert Verde 绿	Rosso Red Rot Rouge Rojo 红
Dispositivo acceso Device ON Einrichtung eingeschaltet Dispositif allumé Dispositivo encendido 设备运行	Sostituire batterie Change battery Batterie ersetzen Remplacer batteries Sustituir baterías 更换电池

Per il trip test, prima di collegare l'interruttore all'impianto, eseguire la seguente procedura (in ogni caso, durante il trip test, sia il circuito primario che quello ausiliario devono essere NON attivi):


- 1) Mettere l'interruttore in posizione aperta
- 2) Inserire il cavo dell'unità TT
- 3) Accendere l'unità TT e verificare che il LED  di alimentazione sullo sganciatore di protezione sia acceso.

-Controllo LED:

- a) Se uno o più LED lampeggiano, fare riferimento alla tabella dei LED.
- b) Se tutti i led sullo sganciatore si accendono in sequenza: OK, pronto per trip test.
- 4) Chiudere l'interruttore.
- 5) Premere per 2 secondi il pulsante trip test dell'unità TT, l'interruttore esegue un trip.

-Scollegare il cavo dell'unità TT.

For the trip test, before connecting the circuit-breaker to the system, perform the following procedure (in any case, during the trip test, both the primary and the auxiliary circuits must be NOT active):


- 1) Put the circuit-breaker in open position
- 2) Insert the TT cable
- 3) Turn on the TT and check that the power LED  on the protection unit is on.

-LED control:

- a) If one or more LEDs are blinking, refer to the LED table.
- b) If all the LEDs on the release light up in sequence: OK, ready for trip test.
- 4) Close the circuit-breaker.
- 5) Press the trip test button on the TT for 2 seconds, the circuit-breaker performs a trip.

-Disconnect the TT cable.

Führen Sie für den Auslösetest das folgende Verfahren durch, bevor Sie den Leistungsschalter an die Anlage anschließen (während des Auslösetests dürfen in jedem Fall sowohl der Primär- als auch der Hilfsstromkreis NICHT aktiv sein):

- 1) Stellen Sie den Cricuit Breaker in die geöffnete Position
- 2) Das Kabel die Einheit TT einstecken
- 3) Schalten Sie die Einheit TT ein und sich vergewissern, dass die Power-LED  auf dem Schutzauslöser leuchtet.

-LED Kontrolle:

- a) Wenn eine oder mehrere LEDs blinken, ist Bezug auf die LED tabelle zu nehmen.
- b) Wenn alle LEDs auf dem Auslöser nacheinander aufleuchten: OK, bereit für den Auslösetest.
- 4) Den Leistungsschalter einschalten.
- 5) Die Taste Auslösetest am die Einheit TT für 2 Sekunden drücken, der Leistungsschalter führt eine Auslösung durch.

-Das Kabel die Einheit TT abtrennen.

Pour le test de déclenchement, avant de connecter le disjoncteur à l'installation, suivre la procédure ci-dessous

(dans tous les cas, pendant le test de déclenchement, aussi bien le circuit primaire que le circuit auxiliaire ne doivent PAS être actifs):

- 1) Mettre le disjoncteur en position ouverte
- 2) Brancher le câble de l'unité TT
- 3) Allumez l'unité TT et vérifier que la LED d'alimentation sur le déclencheur de protection est allumée.

-Contrôle des LED :

- a) Si une ou plusieurs LED clignotent, se reporter au tableau LED.
- b) Si toutes les LED sur le déclencheur s'allument en séquence : OK, prêt pour le test de déclenchement.
- 4) Fermer le disjoncteur.
- 5) Appuyer sur le bouton de test du déclenchement de l'unité TT pendant 2 secondes, le disjoncteur effectue un déclenchement.

-Débrancher le câble de l'unité TT.

Para el test de disparo, antes de conectar el interruptor a la instalación, realizar el siguiente procedimiento (durante la prueba tanto el circuito primario como el auxiliar deben estar siempre en estado NO ACTIVO):

- 1) Ponga el interruptor automático en posición abierta
- 2) Conectar el cable de la unidad TT
- 3) Encienda la unidad TT y verificar que el led de alimentación en el relé de protección esté encendido.

-Control del LED:

- a) Si uno o más LEDs parpadean, consulte la tabla LED.
- b) Si todos los LEDs en el relé se encienden secuencialmente: OK, está listo para el test de disparo.
- 4) Cerrar el interruptor.
- 5) Pulsar 2 segundos el botón de test de disparo de la unidad TT; el interruptor ejecuta un disparo.

- Desconectar el cable de la unidad TT.



进行脱扣测试时，先将断路器连接到设备上，然后执行以下程序（总之在脱扣测试期间，主回路和辅助回路都不能激活）：

- 1) 将断路器置于断开位置
- 2) 插入TT电线，。
- 3) 开启TT，检查脱扣保护装置上的LED 灯是否点亮

- 检查LED灯：

- a) 如果一盏或多盏LED闪烁，请参考表 LED。
- b) 如果脱扣保护装置上的LED灯依次点亮：说明以准备好进行脱扣测试。
- 4) 关闭断路器。
- 5) 按住TT的脱扣测试按钮2秒钟，断路器就会执行一次脱扣。

- 断开TT的电线。

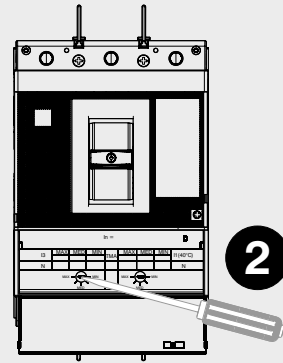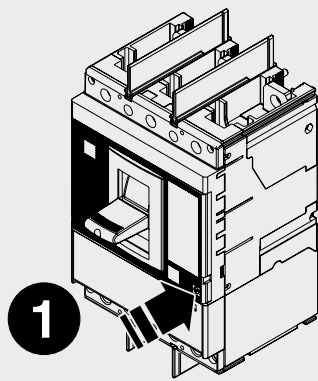

		I1		
	In	MIN (0,7)	MED (0,85)	MAX (1xIn)
TMA	320	224	272	320
	400	280	340	400
	500	350	425	500
	630	441	535	630
TMG	320	224	272	320
	400	280	340	400
	500	350	425	500
	630	441	535	630

		I1		
	In	MIN	MED	MAX
TMA N50%	320	140	170	200
	400	175	212	250
	500	224	272	320
	630	280	340	400

		I3			
		In	MIN (5xIn)	MED (7,5xIn)	MAX (10xIn)
TMA	320	1600	2400	3200	
	400	2000	3000	4000	
	500	2500	3750	5000	
	630	3150	4725	6300	

		I3			
		In	MIN (2,5xIn)	MED (3,75xIn)	MAX (5xIn)
TMG	320	800	1200	1600	
	400	1000	1500	2000	
	500	1250	1875	2500	
	630	1575	2363	3150	

		I3			
		In	MIN (7xIn)	MED (10xIn)	MAX (13xIn)
MA	320	2240	3200	4160	
	400	2800	4000	5200	
	500	3500	5000	6500	



ATTENZIONE! Istruzioni relative alla Trip unit Ekip Touch sono disponibili con il documento [1SDH002039A1001](#).

WARNING! Instructions on Ekip Touch Trip unit are available with document [1SDH002039A1002](#).

ACHTUNG! Anweisungen zu Trip unit Ekip Touch finden Sie mit dem Dokument [1SDH002039A1003](#).

ATTENTION! Instructions concernant Trip unit Ekip Touch sont disponibles avec le document [1SDH002039A1004](#).

ATENCIÓN! Instrucciones sobre Trip unit Ekip Touch están disponibles con el documento [1SDH002039A1005](#).

警告! Ekip Touch脱扣器有可用的说明文件 [1SDH002039A1002](#).

-Le trip unit Ekip Touch e Hi-Touch aventi rating plug 500A e 630A possono essere equipaggiate con i rating plug XT5 da 250A a 630A. Quelle aventi rating plug fino a 400A possono essere equipaggiate con i rating plug XT5 da 250A a 400A.

-Ekip Touch and Hi-Touch trip units with 500A and 630A rating plugs can be equipped with 250A to 630A XT5 rating plugs. Those with rating plugs up to 400A can be equipped with 250A to 400A XT5 rating plugs.

-Die Auslösegeräte Ekip Touch und Hi-Touch mit Bemessungsstrommodulen von 500A und 630A können mit Bemessungsstrommodulen XT5 von 250A bis 630A ausgestattet werden. Diejenigen mit Bemessungsstrommodulen bis 400A können mit Bemessungsstrommodulen XT5 von 250A bis 400A ausgestattet werden.

-Les déclencheurs Ekip Touch et Hi-Touch ayant des rating plug de 500A et 630A peuvent être équipés avec les rating plug XT5 de 250A à 630A. Ceux ayant des rating plug jusqu'à 400A peuvent être équipés avec les rating plug XT5 de 250A à 400A.

-Los relés de protección Ekip Touch y Hi-Touch con rating plug 500A y 630A pueden ser equipados con los rating plug XT5 de 250A a 630A. Aquellos con rating plug de hasta 400A pueden ser equipados con los rating plug XT5 de 250A a 400A.

-具有500A和630A的Rating Plug的脱扣单元Ekip Touch和Hi-Touch，可配备250A至630A的XT5 Rating Plug。具有400A以下Rating Plug的脱扣单元，可配备250A至400A的XT5 Rating Plug。